



**RVC-AJ41/W / RVC-AJ41/B**

**無線手提吸塵機 Cordless Handheld Vacuum Cleaner**



## 使用說明書

### OPERATION MANUAL

在使用本產品前，請仔細閱讀此說明書，閱讀後小心收保存，以備日後查閱。  
Please read the operation manual carefully before using and well keep it in a safe place for future reference.

本說明書中的圖示可能與實物有不同的地方，僅供參考。

Some figures in this manual may not match with the real object, just for reference only.



非常感謝您選購樂信牌無線手提吸塵機，在使用前請先詳細閱讀此說明書，並保存以備日後參考。



## 目錄

1. 安全注意事項
2. 保養、清潔及儲存
3. 產品規格
4. 產品結構
5. 配件的組裝與拆除
6. 使用方法
7. 充電方法
8. 故障排除
9. 特別聲明
10. 售後服務



# 1. 安全注意事項











使用本產品時，必須遵守下列安全預防措施：

下圖表示由於錯誤操作而引起不同程度的危險等級。

	<b>警告：</b> 此標誌表示可能造成傷亡。
	<b>注意：</b> 此標誌表示可能造成傷害或機件故障

以下不同標誌區分各種必須遵守的指示。

	此標誌表示 禁止。
	此標誌表示 必須遵守。


			
	當本產品充電中或啟動後，切勿將毛髮、寬鬆的衣物、手指或身體任何部份(特別是口、耳及眼)靠近伸延管、吸風口或活動機件，以免造成傷害。		切勿在充電器的電源線上放重物或讓其接觸灼熱的表面；切勿夾住、改裝、用力拉扯或扭曲充電器的電源線。
	切勿在沒有裝置過濾網及集塵杯的情況下使用本產品，以免因使用不當而造成損壞。		請確保本產品的吸氣及排氣口空氣流通。如有堵塞，應立即清理，否則會導致吸力減低或令摩打過熱。
	充滿電後，必須拔除充電器。長時間充電，可能造成充電池過熱及燃燒等危險。		在清潔本產品、安裝或拆卸配件前，請確保充電器已從插座拔掉並確保電源已關閉。
	在充電期間，切勿離開本產品。		在插入或拔除充電器時，應用手握穩插頭，不要抓住電源線。
	切勿將本產品放置於書櫃、壁櫥或其他封閉的空間。確保本產品的通風良好。		切勿在充電器的電源線纏結的情況下使用。



			
	為防止危險，請按照此說明書建議方法使用，切勿在室外、濕的表面使用或用作吸塵以外的其他用途。		切勿使用有殘缺或鬆動的插座。確保充電器使用前已充分抹乾及使用時插穩。
	切勿讓小孩在沒有監督下使用、清潔及維修保養本產品或把其當作玩具。請將本產品及其充電器放於小孩不能接觸的地方。		本產品必須使用生產商提供的充電電池及充電器進行充電。使用非生產商提供的充電電池或充電器，可能會損壞產品及造成危險。
	切勿將本產品、充電電池、充電器或其插頭浸入水中，或被水濺濕，以免造成觸電的危險。		手濕時切勿安裝配件、接觸、插入或拔除充電電池及充電器，否則可構成觸電的危險。
	切勿使用本產品吸除以下物品，否則會引起堵塞、重要部件的損壞及造成危險： - 易燃物質、高溫物質或易燃液體(如煙蒂、熱灰餘燼及汽油等) - 尖銳或金屬物件(如針、破碎的玻璃及牙籤等) - 超細物質(如石灰、水泥、碳粉及石膏粉等) - 大型物件 - 水、各種液體或潮濕表面 (如濕毛毯等) - 化學物質(如清潔劑等)		為避免危險，使用及充電時必須遠離以下地方： - 易燃物、噴霧劑及煙劑等周圍 - 熱源 (如散熱器)、火源或直接受陽光照射的地方 - 近水的環境 - 大量熱氣、蒸氣或潮濕的地方
	本產品可供年齡在 8 歲或以上的兒童及體質、感覺或智力有障礙人士或缺乏經驗和相關知識的人士使用，但他們必須曾經接受負責安全人士的監督或指導如何安全地使用吸塵機和理解所涉及的危險。		經常檢查本產品、充電器及充電電池，如有損壞，為避免危險，請立即停止使用，並聯絡信興電器服務中心有限公司進行檢查及維修。切勿擅自改裝本產品或使用非生產商提供的零件修理，否則可造成危險及維修保養無效。
	本產品包含只能由技術人員更換的電池。		只能使用本產品隨機附送的充電器為電池充電。

## 2. 保養、清潔及儲存


建議用戶定期清理集塵杯及過濾網，否則，集塵杯太滿或濾芯灰塵過度積聚，可能會減弱吸塵機的吸力。

### 2.1 清理集塵杯及濾芯


<p>1. 按下集塵杯左右的釋放按鈕，然後將集塵杯從主機取下。 注意！必須捉緊主機及集塵杯，慎防因拆除配件令主機或集塵杯掉下，造成損毀。</p>	 <p>The diagram illustrates the first step of cleaning. On the left, a close-up shows a hand pressing a '釋放按鈕' (release button) on the dust cup. On the right, a hand is shown pulling the '集塵杯' (dust cup) away from the main unit. The dust cup is shown tilted, ready to be emptied.</p>
<p>2. 從集塵杯中取出 HEPA 濾芯，將集塵杯內的垃圾倒掉。</p>	 <p>The diagram shows the second step. On the left, the 'HEPA 濾芯' (HEPA filter) is being lifted out of the '集塵杯' (dust cup). On the right, the dust cup is shown tilted over a trash bin, with the collected dust falling out.</p>
<p>3. 提起 HEPA 濾芯，逆時針方向轉動高效濾網以拆除濾芯。</p>	 <p>The diagram shows the third step. A hand is shown turning the 'HEPA 濾芯' (HEPA filter) counter-clockwise to detach it from the dust cup.</p>
<p>4. HEPA 濾芯可用柔軟的毛刷，將外部的灰塵或污物掃走。 警告！HEPA 濾芯切勿浸水或弄濕。</p>	 <p>The diagram shows the fourth step. A hand is shown using a soft brush to clean the exterior of the 'HEPA 濾芯' (HEPA filter).</p>
<p>5. 高效濾網及集塵杯均可用水直接沖洗。 完成後，待充分乾透後再裝回機體內。</p>	 <p>The diagram shows the fifth step. The 'HEPA 濾芯' (HEPA filter) and the '集塵杯' (dust cup) are shown being washed in a bowl of water.</p>
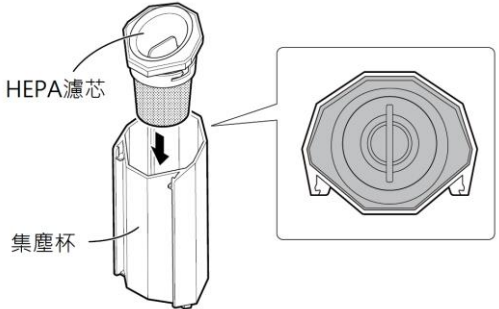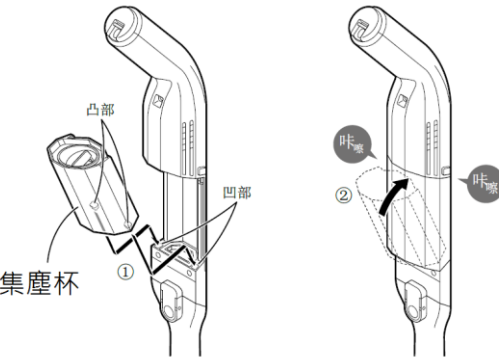
<p>6. 提起 HEPA 濾芯，順時針方向轉動裝回高效濾網，然後將濾芯裝回集塵杯內。 注意！切勿強硬地將濾芯裝回集塵杯，以免後續難以取出。</p>	
<p>7. 將集塵杯底的凸部，對準主機的凹部，然後將集塵杯壓向主機方向，直至聽到“咔嚓”聲，表示組裝完成。</p>	

## 2.2 清潔主機及配件
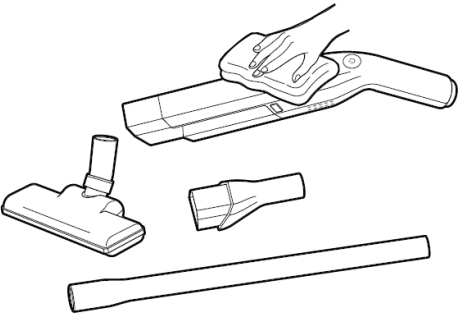
<ol style="list-style-type: none"> <li>1. 可用濕軟布清潔主機表面及配件，然後擦乾。切勿用水沖洗主機。</li> <li>2. 切勿使用百潔布或其他粗硬的潔具清潔。</li> <li>3. 切勿使用有毒或含腐蝕性清潔劑進行清潔。</li> </ol> <p>備註：建議先清空集塵杯，再進行主機及配件的清潔及保養。</p>	
--	---

## 2.3 清潔地刷
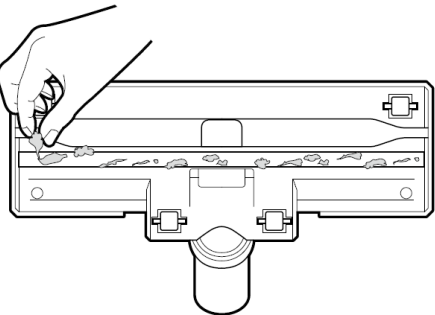
<ol style="list-style-type: none"> <li>1. 徹底處理地刷底部的毛髮及垃圾等異物。</li> <li>2. 如遇到糾纏的污物，可使用鑷子協助去除。</li> </ol>	
---	--

## 2.4 儲存

待產品完全冷卻及清潔後，才可存放於紙盒，並須放置於陰涼及乾燥的環境中。


### 3. 產品規格

型號	RVC-AJ41/W	RVC-AJ41/B
顏色	白色	棕色
額定電壓	DC 11.1V	
額定功率	100W	
充電池種類	鋰離子電池	
額定充電池容量	2200mAh	
充電器輸入規格	100-240V~ 50/60 Hz	
充電器輸出規格	DC 13.5V 500mA	
充電時間 (約)	4.5 小時	
使用時間 (約)	標準：30 分鐘* 強力：12 分鐘*	
集塵量	100 毫升	
產品尺寸 (闊 x 深 x 高) (約) (安裝伸延管及地刷)	224 x 100 x 1045 毫米	
淨重 (約) (安裝伸延管及地刷)	0.93 公斤	

\* 本產品可運行時間的長短會因電池溫度及其他使用條件而有所差異。



## 4. 產品結構

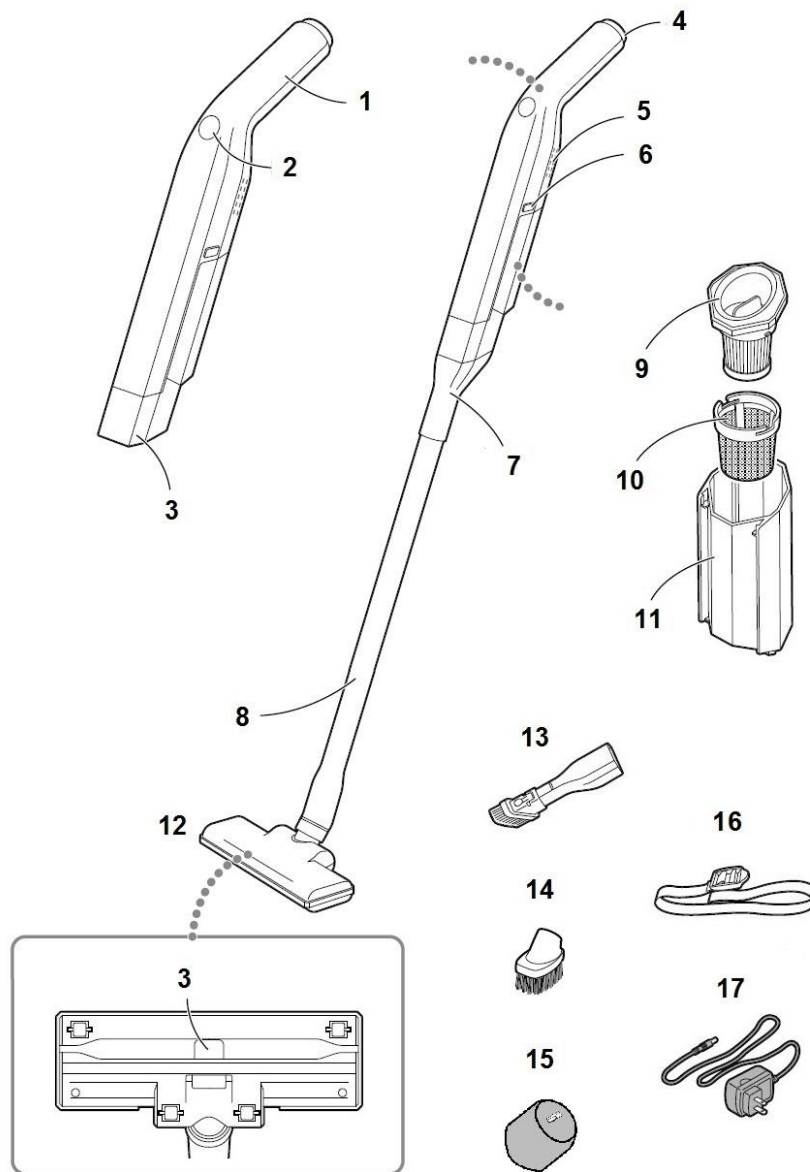

- |                  |               |
|------------------|---------------|
| 1. 手柄            | 11. 集塵杯       |
| 2. 電源指示燈/ 模式切換按鈕 | 12. 地刷        |
| 3. 吸風口           | 13. 二合一縫隙毛刷吸頭 |
| 4. 電源開關按鈕        | 14. 細毛刷頭      |
| 5. 排風口           | 15. 防滑頭       |
| 6. 集塵杯拆卸按鈕       | 16. 掛繩        |
| 7. 插管            | 17. 充電器       |
| 8. 延長管           |               |
| 9. HEPA 濾芯       |               |
| 10. 高效濾網         |               |

## 5. 配件的組裝與拆除

### 5.1 組裝配件


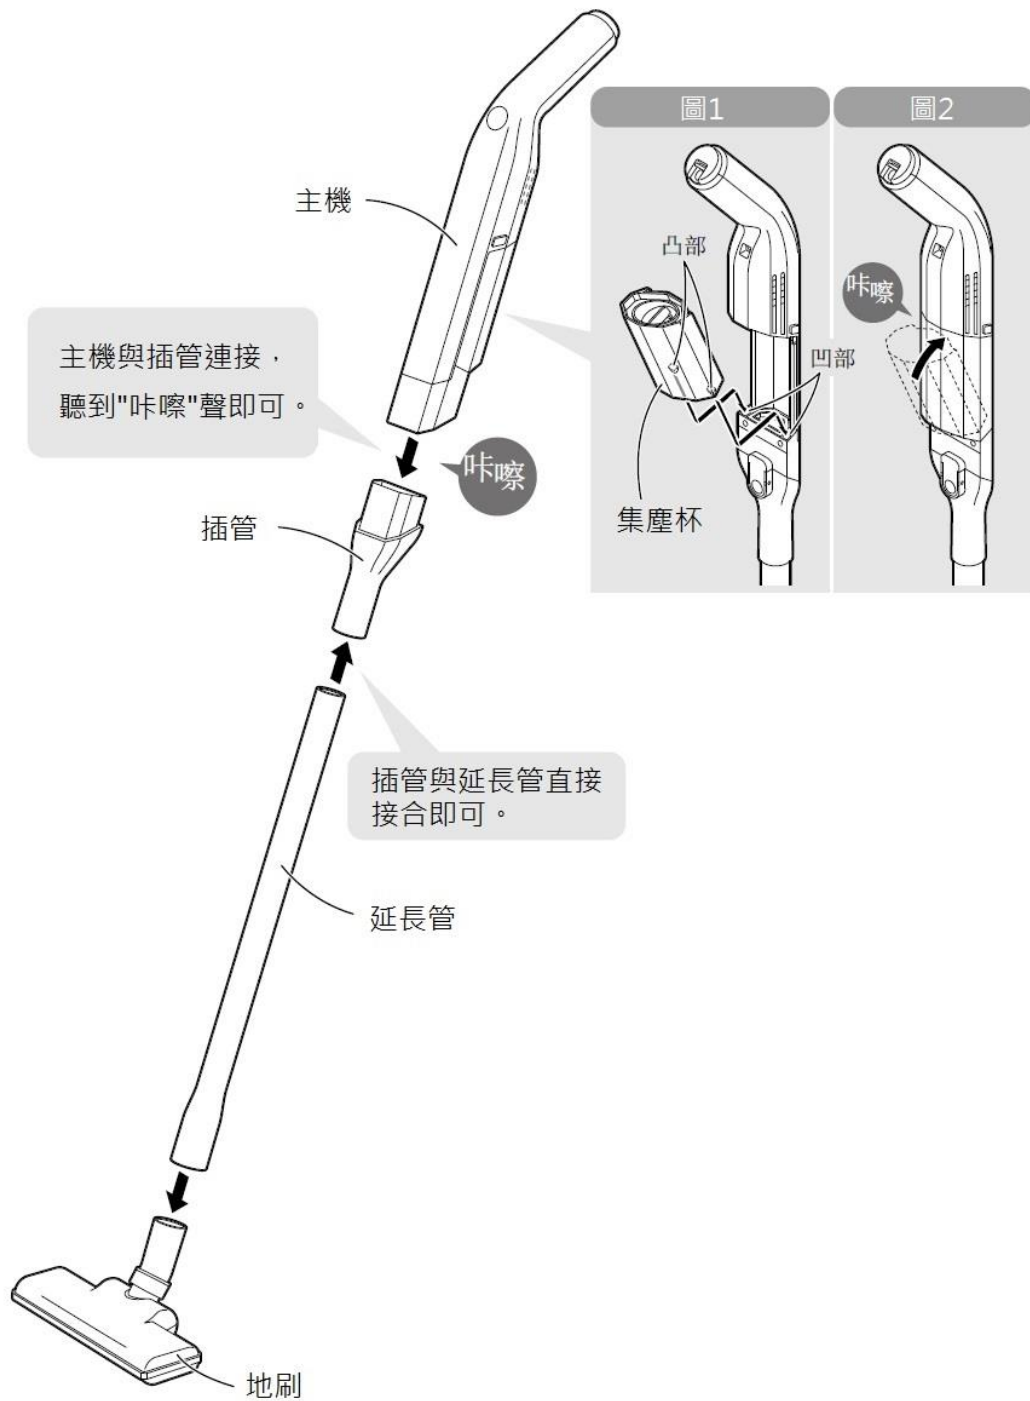


圖 1) 將集塵杯的凸部對準主機的凹部。




圖 2) 按圖所示，將集塵杯推向主機，直至聽到“咔嚓”聲即可。

## 5.2 拆除配件

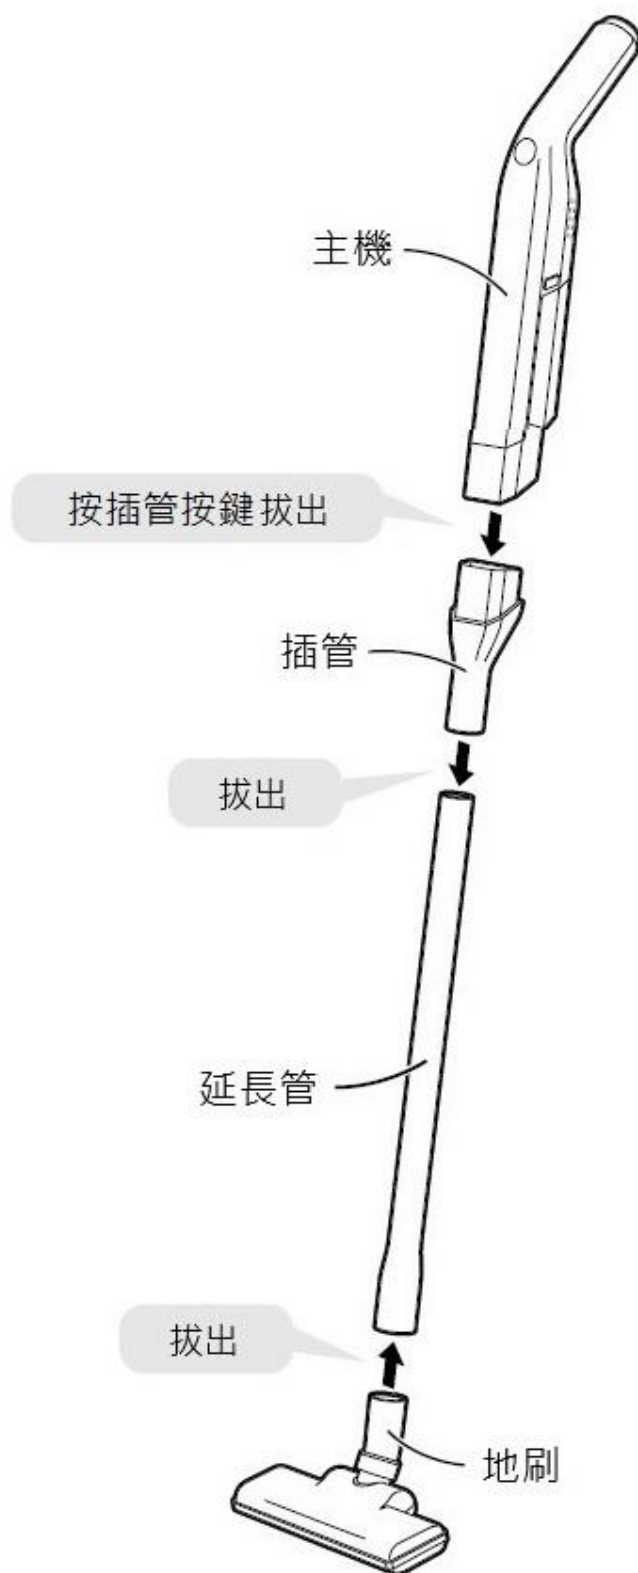

**注意！**用戶須按下插管按鍵，才能將插管由主機拆除。


## 6. 使用方法
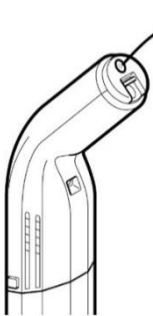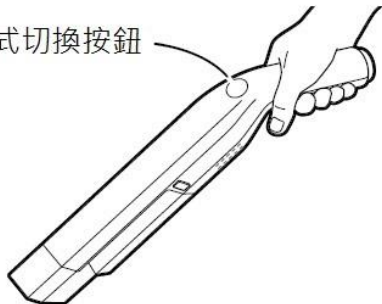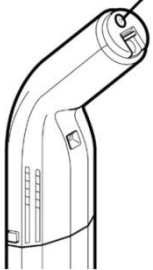
<p><b>開始運作</b></p> <p>按&lt;電源開關&gt;按鈕，電源指示燈亮起，產品開始以預設“標準”模式（低轉速）運作。</p>	 <p>電源開關按鈕</p>
<p><b>轉換模式</b></p> <p>按下&lt;模式切換&gt;按鈕，產品將由“標準”模式（低轉速）轉換成“強力”模式（高轉速）。</p> <p>重複按&lt;模式切換&gt;按鈕，模式將會交替切換。</p>	 <p>模式切換按鈕</p>
<p><b>完成工作</b></p> <p>使用後，按&lt;電源開關&gt;按鈕關閉本產品。</p>	 <p>電源開關按鈕</p>

## 配件的組裝及使用 (手持式)

### 拆除插管

- ① 手提主機，並按下插管按鍵。
- ② 將插管由主機拆除。

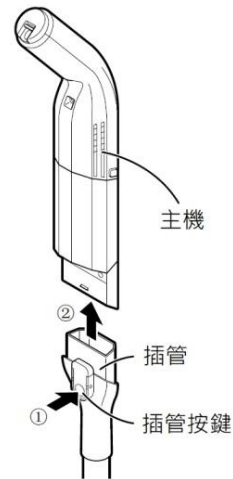

### 開啟電源

按下<電源開關>按鈕，電源指示燈亮起，產品開始以預設“標準”模式 (低轉速) 運作。




### 完成工作

清潔完成後，按<電源開關>按鈕關閉本產品。



### 附件的安裝

為應付不同清潔環境定需要，客戶可按實際情況組裝附件吸頭，以達至理想的清潔效果。

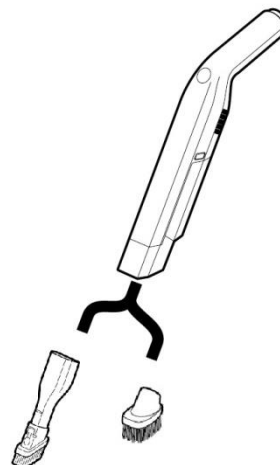

## 掛繩的安裝方法


1. 將掛繩的繩尾穿過手柄掛繩位置的主軸。



2. 如右圖所示，將繩尾從繩扣的底部穿過，繞過繩扣中間的軸，再從繩扣上面穿過，組裝掛繩已完成。  
(注意！掛繩必須繫緊主機，不然，產品意外摔倒地上或會產生故障)




3. 當產品不在使用時，可利用手柄掛繩將產品懸掛於牆的鉤子上。  
(注意！鉤子必須牢固繫於牆上，如果鉤子或牆壁鬆動，容易將產品器摔倒，因而損壞產品及地板)

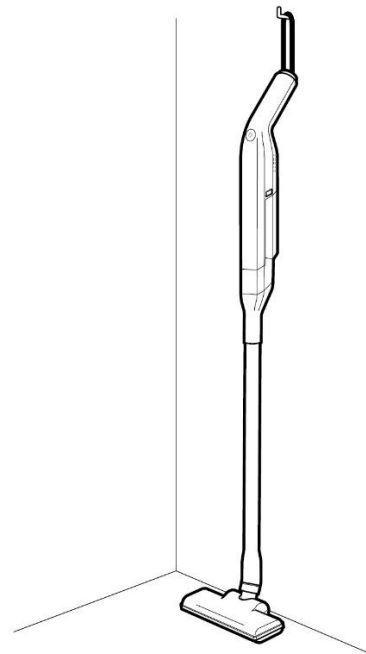


## 防滑頭的應用

除了利用掛繩將產品懸於牆上，為防止產品因倚牆放置而意外摔倒，用戶可利用隨機的防滑頭，妥善安裝於手柄，避免因放置時令產品意外摔倒。

1. 將防滑頭對準手柄，然後套到手柄末端，直至穩妥。

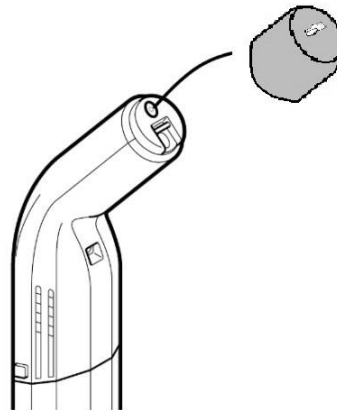




2. 如運作過程中需要暫停運作，可利用裝好的防滑頭，將產品手柄倚牆放置。

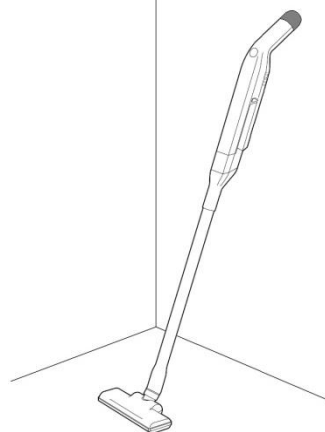

## 7. 充電方法

首次使用，或者長時間不使用時，必須確保產品已充滿電。(切勿於充電時按下<電源開關>按鈕開啟本產品)

**警告！** 電源供應必須為 220伏特交流電，及必須使用原裝充電器。如使用非原裝的充電器為本產品充電，可能會造成故障和起火。
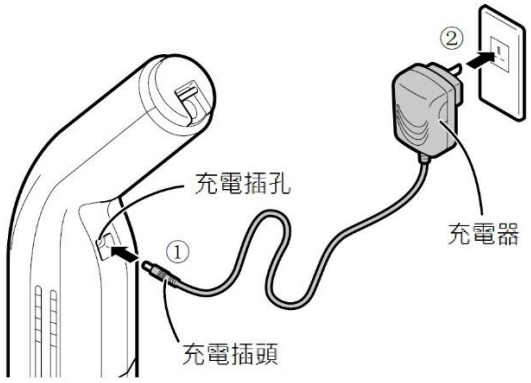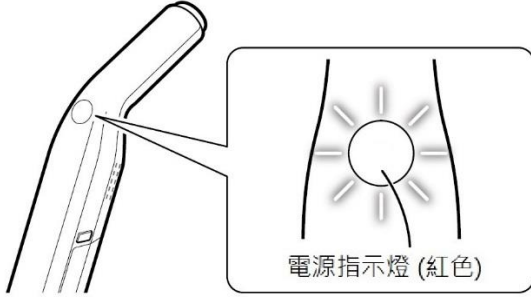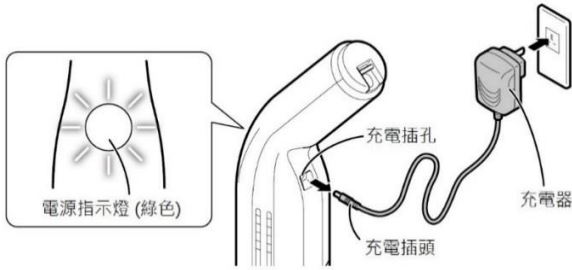
<p><b>接駁充電器</b></p> <p>① 先將充電插頭連接於主機背面的充電插孔上；</p> <p>② 將充電器的另一端插入電源插座。</p>	 <p>The diagram illustrates the connection process. On the left, a charging cable with a two-pronged plug is being inserted into a charging port on the back of a handheld device. An arrow labeled '1' points to the plug. On the right, the other end of the cable is plugged into a standard wall outlet. An arrow labeled '2' points to the wall outlet. Labels include '充電插孔' (charging port), '充電插頭' (charging plug), and '充電器' (charger).</p>
<p><b>電源指示燈確認</b></p> <p>充電時，電源指示燈亮起紅色。標準充電時間約 4.5小時。</p> <p>如電池的溫度過高，紅色的電源指示燈會閃爍，請先將充電器從插座上拔除，待產品冷卻後再次連接充電器。</p>	 <p>The diagram shows a close-up of the device's back with a callout box highlighting a red indicator light. The light is depicted as a circle with radiating lines, signifying it is on. The label '電源指示燈 (紅色)' (power indicator light (red)) is placed below the callout.</p>
<p><b>完成充電</b></p> <p>當電源指示燈轉為綠色，表示充電完成。用戶可先從插座拔出充電器，然後再拔掉充電插頭。</p>	 <p>The diagram shows the device with a callout box highlighting a green indicator light, signifying that charging is complete. The label '電源指示燈 (綠色)' (power indicator light (green)) is placed below the callout. In the background, the charging cable is shown disconnected from both the device and the wall outlet. Labels include '充電插孔' (charging port), '充電插頭' (charging plug), and '充電器' (charger).</p>

- \* 備註：首次使用前，必須將電池徹底充電。
- \* 備註：充電進行中，充電器及主機會變熱，此乃正常現象。
- \* 備註：若長時間不使用產品，請每3個月進行一次充電，防止電池老化。



## 8. 故障排除

故障現象	原因	解決方法
產品不能運作。	充電電池電量不足。	將產品完全充電再使用。
電源指示燈閃爍，不能充電。	使用錯誤的充電器。	請使用原裝的充電器替產品充電。
	保護裝置已啟動。	暫停運作，待產品冷卻 30 分鐘後再使用。
吸力變弱。	集塵杯已滿。	參考章節 2.1 清理集塵杯及濾網積聚太多灰塵。 濾網清洗集塵杯及過濾網。
	濾網積聚太多灰塵。	
	電量不足。	重新將產品充電。
	集塵杯安裝不良。	參考章節 2.1 清理集塵杯及濾網重新安裝集塵杯。
	有異物堵塞地刷。	參考章節 2.3 清潔地刷檢查並將異物清除。
吸塵時，有灰塵從出氣口漏出。	集塵杯或過濾網安裝不正確。	參考章節 2.1 清理集塵杯及濾網重新安裝集塵杯及過濾網。
噪音。	集塵杯已滿。	參考章節 2.1 清理集塵杯及濾網清洗集塵杯及過濾網。
	有異物堵塞。	將異物清除。
使用中，產品突然停止操作。	保護裝置已啟動。	暫停運作，待產品冷卻 30 分鐘後再使用。

如使用以上方法仍未能使產品恢復正常操作，切勿嘗試自行維修。請聯絡信興電器服務中心有限公司進行檢查及維修。

## 9. 特別聲明

1. 本資料上所有內容經過核對，如有任何印刷及內容上的誤解，本公司將保留解釋權。
2. 本產品若有技術改進，會編進新版說明書中，恕不另行通知；產品外觀、顏色如有改動，則以製造商資料為準。
3. 如本資料之中英文版本有差異時，應以中文版為準。
4. 使用說明書的電子副本可以通過電子郵件發送致客戶，如有需要，可致電信興電工工程有限公司：28612767。

## 10. 售後服務

1. 由購買收據日期起之一年保修期內，經信興電器服務中心有限公司之服務人員證實產品故障屬於正常使用之情況下發生者，本公司將提供免費維修或更換零件服務。經更換之任何損壞零件，將歸屬本公司所有。保修範圍不包括修理或更換產品之損耗性零件等。
2. 用戶必須於維修時出示購買收據／換購收據及蓋有銷售點／換購中心印章的產品保修記錄卡。如有任何疑問，請致電信興電器服務中心有限公司熱線：24065666查詢。



Thank you for choosing Rasonic cordless handheld vacuum cleaner. Read the operation manual carefully before use and keep it for your future reference.

## **Table of Contents**



1. Important Safeguards
2. Maintenance, Cleaning and Storage
3. Product Specifications
4. Product Descriptions
5. Accessories Assembly and Disassembly
6. Operation Instructions
7. Charging
8. Troubleshooting
9. Special Avowal
10. After Sales Service








# 1. Important Safeguards





When using the appliance, please follow the below safety precautions: The following chart indicates the degree of damage caused by wrong operation.

	<b>WARNING:</b> Indicates that may cause death or serious injury.
	<b>CAUTION:</b> Indicates hazards that may cause human injuries or property damages









The following symbols can distinguish the instruction types that need to be strictly followed.





	These symbols mean prohibition
	These symbols mean requirement that must be followed.

			
	When the appliance is charging or switched on, keep the extension tube, suction inlets or moving parts away from your hair, loose clothing, fingers or any parts of your body (especially mouth, ears and eyes), it is to avoid injury.		Do not put heavy objects on the power cord of the adaptor or let it touch any hot surface. Never clip, modify, stretch or twist the power cord of the adaptor.
	Never use the appliance when filters and dust cup are not in place, it is to avoid damage due to improper use.		Always keep the suction inlet and the exhaust outlet free of blockage. If there is any blockage, please remove them immediately. Otherwise, it will cause loss of suction power or motor overheat.
	Make sure to unplug the adaptor after fully charged. Charging for a long time may cause hazards		Remove the adaptor from socket and the power switch is at the off position before cleaning

	such as rechargeable battery overheat and burn.		appliance, installing or removing the accessories.
	Do not leave the appliance unattended while it is charging.		Always hold the adaptor plug tightly with hands when insert or remove it. Do not grasp its power cord.
	Do not place the appliance in a bookcase, built-in cabinet or in another confined space. Ensure the appliance is well ventilated.		Do not use the adaptor when its power cord is tangle.





	To avoid danger, use the appliance only as described in this manual. Do not use outdoors, on wet surfaces or for other purposes than vacuuming.		Never use deficient or loosen power socket. Make sure the adaptor is dry before use and inserted firmly when use.
	Children shall not play with the appliance. Using, cleaning and maintenance shall not be made by children without supervision. Please put the appliance and its adaptor in a place not reachable by children.		The appliance must be used with the provided rechargeable battery and charged with the provided adaptor. To avoid the appliance damage and danger, never use the unauthorized rechargeable battery or adaptor.
	Never immerse the appliance, rechargeable battery, adaptor or its plug into water or let them wet, it is to avoid electric shock.		To avoid electric shock, never assemble accessories, touch, plug or unplug the rechargeable battery and adaptor with wet hands.
	Never use the appliance to suck below materials, otherwise it will cause blockage, damage on major parts and danger. – Flammable materials, hot materials or combustible liquids (e.g. cigarettes, burning ashes and gasoline etc.) – Sharp or metal objects (e.g. needles, broken glass and toothpicks etc.) – Fine powder (e.g. lime, cement, toner and gypsum powder etc.) – Large objects – Water, any liquid or wet surface (e.g. wet carpet) – Chemical substance (e.g. cleanser).		To avoid danger, never use and charge the appliance near the environment of: – Flammable materials, sprays and aerosols – Heat source (e.g. radiator), fire or expose under direct sunlight – Near water – Massive hot air, steam or humid area.




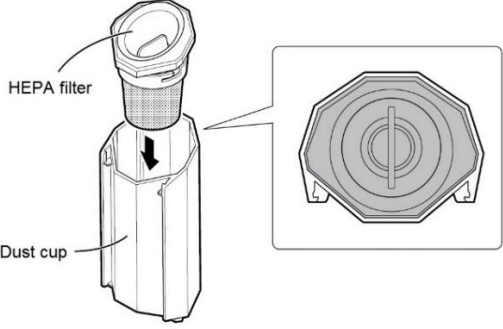
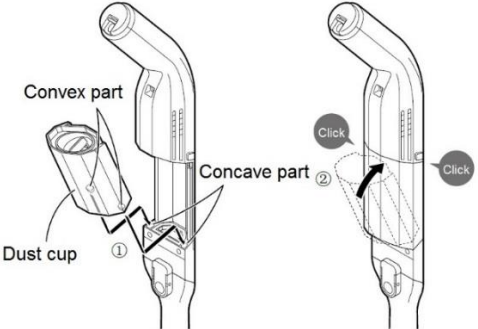
	<p>The appliance can be used by children aged from 8 years and above and person with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.</p>		<p>Always check the condition of the appliance, adaptor and rechargeable battery. To avoid hazards, please stop using immediately if any damage is found. Please contact Shun Hing Electric Service Centre Limited for checking and repairing. Do not attempt to modify the appliance by yourself or repair with any parts that are unauthorized, otherwise it may cause hazards and warranty becomes invalid.</p>
	<p>The appliance contains batteries that are only replaced by skilled persons.</p>		<p><b>WARNING:</b> For the purpose of recharging the battery only use the detachable supply unit provided with the appliance.</p>

## 2. Maintenance Cleaning and Storage

It is recommended to clean the dust cup and filters regularly, otherwise if the dust cup gets too full or the filters get too dirty, it may weaken the suction power of the appliance.


### 2.1 Clean the dust cup and filter
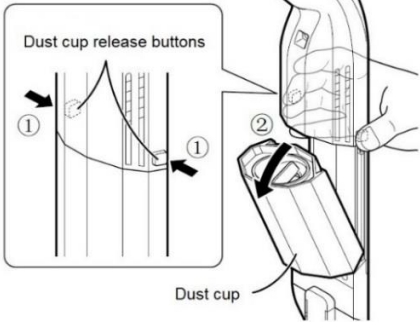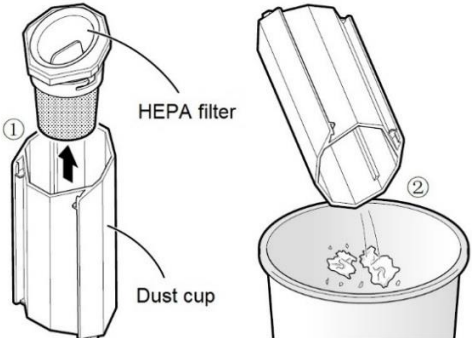
<p>1. Press the dust cup release button to remove it from the main body.</p> <p><b>ATTENTION!</b> The main body and dust cup must be held tightly to prevent dropping due to the removal of accessories.</p>	
<p>2. Remove the HEPA filter accessory from the dust cup and discard the garbage in the dust cup.</p>	
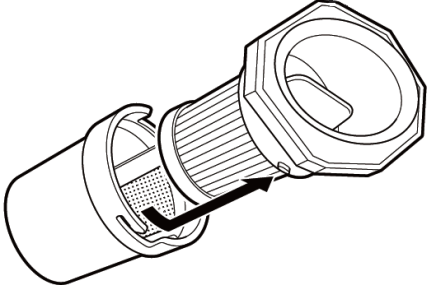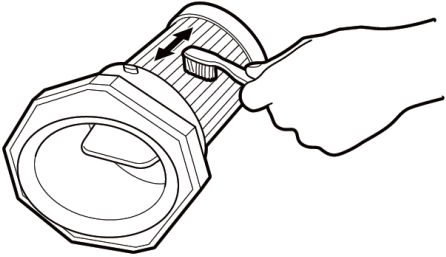
<p>3. Hold the HEPA filter accessory. Turn counterclockwise to separate the HEPA filter from the washable filter.</p>	
<p>4. Clean the HEPA filter with a soft brush and gently rub along the creases to remove dust and dirt. <b>WARNING: DO NOT</b> immerse the HEPA filter in water or let it wet.</p>	
<p>5. The washable filter and dust cup can be washed. Install when the washable filter and dust cup is dried.</p>	
<p>6. Put the HEPA filter into the washable filter, align and rotate the HEPA filter in clockwise to lock. Then, insert back to the dust cup. <b>ATTENTION!</b> Do not plug it hard back into the dust cup; otherwise, it will become difficult when taking out.</p>	
<p>7. Align the convex part at the bottom of the dust cup with the concave part of the main body, and then push the dust cup towards the main body until a "click" sound is heard, indicating that the assembly is finish.</p>	


## 2.2 Clean the main body and accessories

1. Clean the main body surface and the accessories by a damp cloth, then wipe it dry. Never rinse the main body with water.
2. Never clean with scouring pad or other hard material.
3. Never use poisonous or corrosive detergent for cleaning.  
Remarks: Please empty the dust cup before cleaning and maintenance.

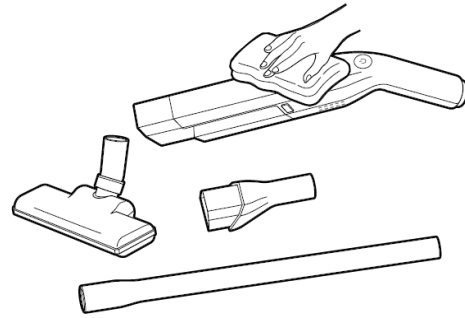

## 2.3 Clean the floor brush

1. Dispose the foreign objects such as hair and trash on the floor brush thoroughly.
2. Use tweezers to help remove entangled dirt if necessary.

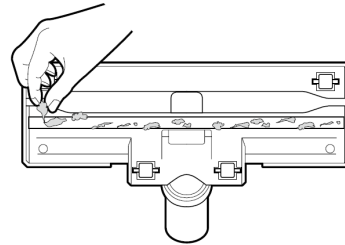

## 2.4 Storage

The appliance must be cooled down and cleaned before storing in a box. Store it in a cool and dry place.




### 3. Product Specifications

<b>Model</b>	RVC-AJ41/W	RVC-AJ41/B
<b>Color</b>	White	Brown
<b>Rate Voltage</b>	DC 11.1V	
<b>Rated Power</b>	100W	
<b>Rechargeable Battery Type</b>	Lithium-ion Rechargeable battery	
<b>Rated Rechargeable Battery Capacity</b>	2200mAh	
<b>Adaptor Input</b>	100-240V~ 50/60 Hz	
<b>Adaptor Output</b>	DC 13.5V 500mA	
<b>Charging Time (Approx.)</b>	4.5hours	
<b>Operation Time (Approx.)</b>	Normal : 30 minutes* Full : 12 minutes*	
<b>Dust Cup Capacity</b>	100 ml	
<b>Product Size (WxDxH) (Approx.) (Extension tube &amp; motorized floor brush installed)</b>	224 x 100 x 1045 mm	
<b>Net Weight (Approx. ) (Extension tube &amp; motorized floor brush installed)</b>	0.93 kg	

\* The length of operation time can run varies depending on the temperature of the battery and other usage conditions.

## 4. Product Descriptions

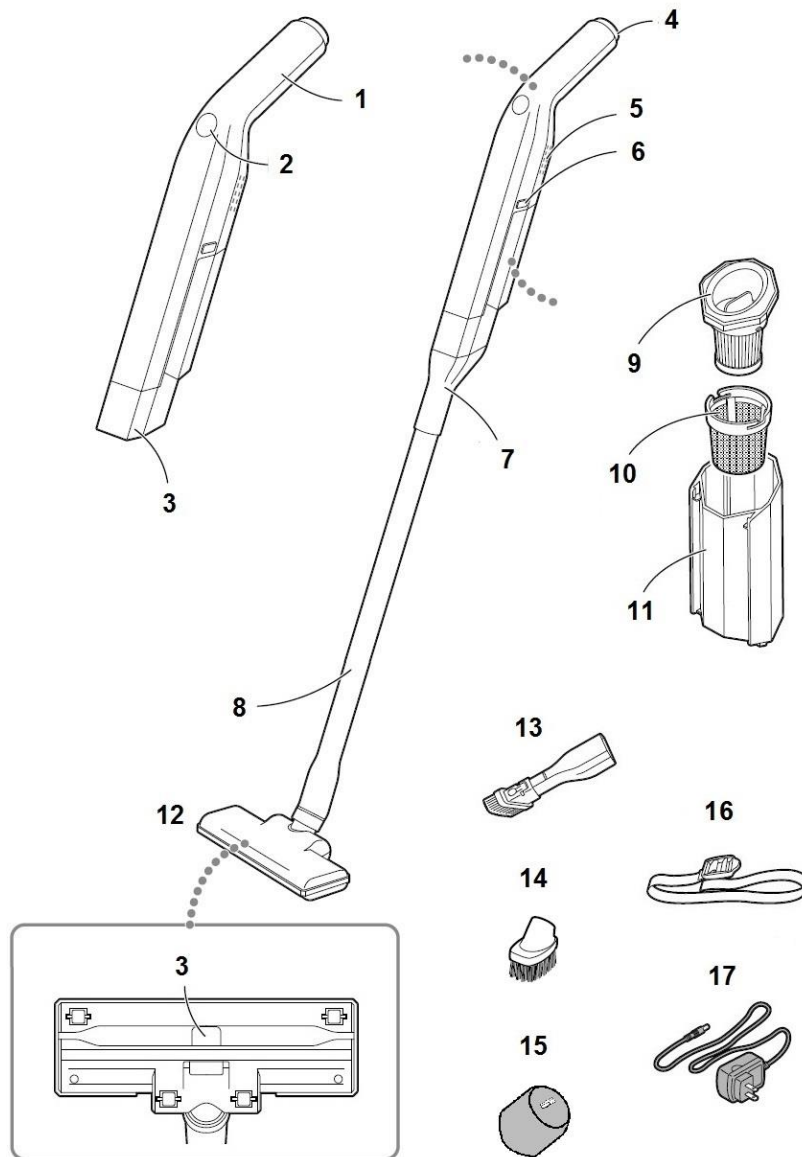

1. Handle
2. Power indicator/ speed button
3. Suction vent
4. Power button
5. Exhaust vent
6. Dust cup release button
7. Connector
8. Floor brush pipe
9. HEPA filter
10. Washable filter

11. Dust cup
12. Floor brush
13. 2 in 1 crevice nozzle
14. Small brush
15. Anti-slip cover
16. Hang strap
17. Adapter

## 5. Accessories Assembly and Disassembly

### 5.1 Accessories Assembly


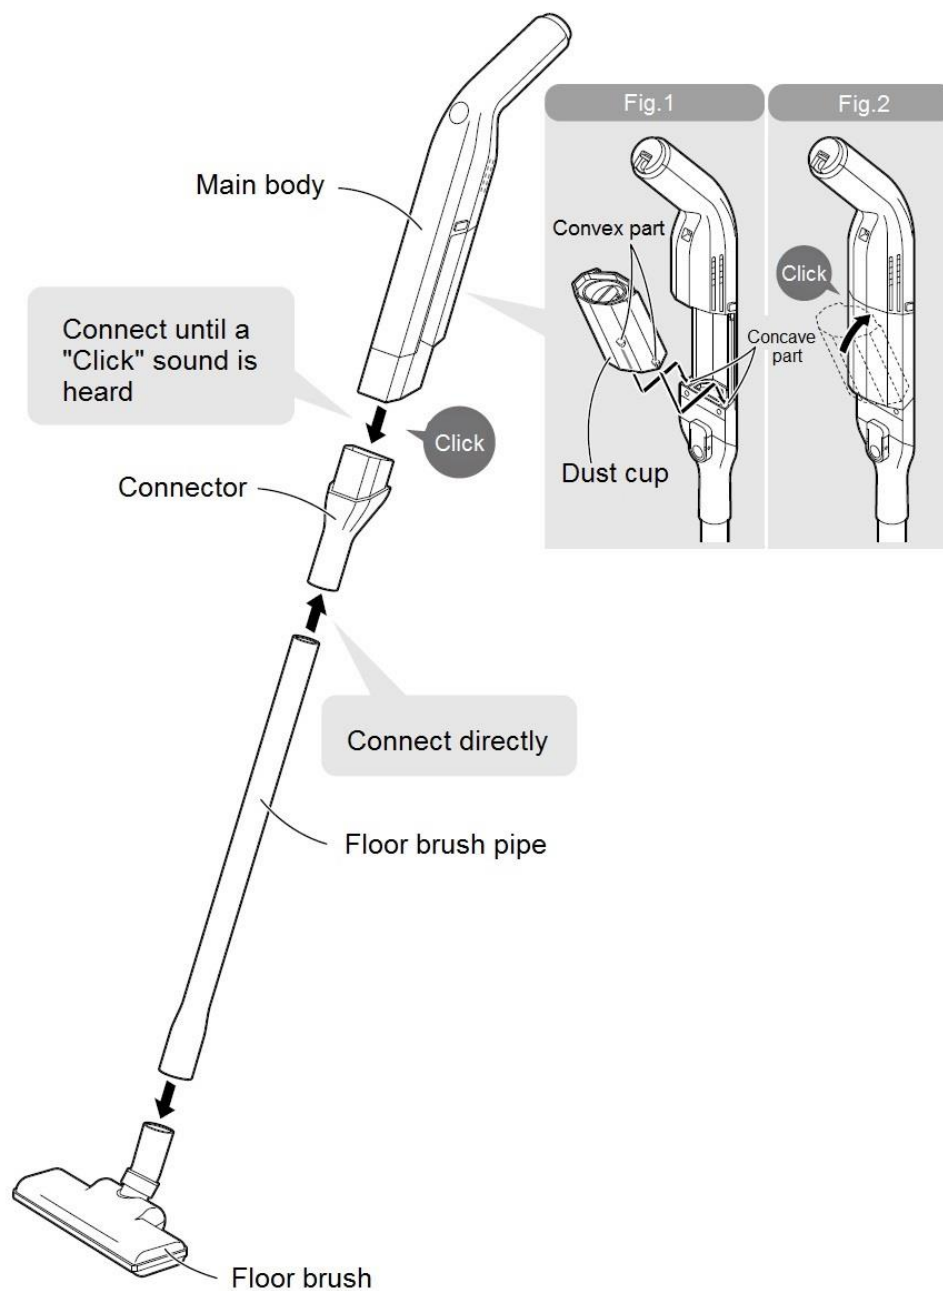


Fig. 1) Align the convex part at the bottom of the dust cup with the concave part of the main body.




Fig. 2) Refer to the illustration, push the dust cup towards the main body until a "click" sound is heard.

## 5.2 Accessories Disassembly

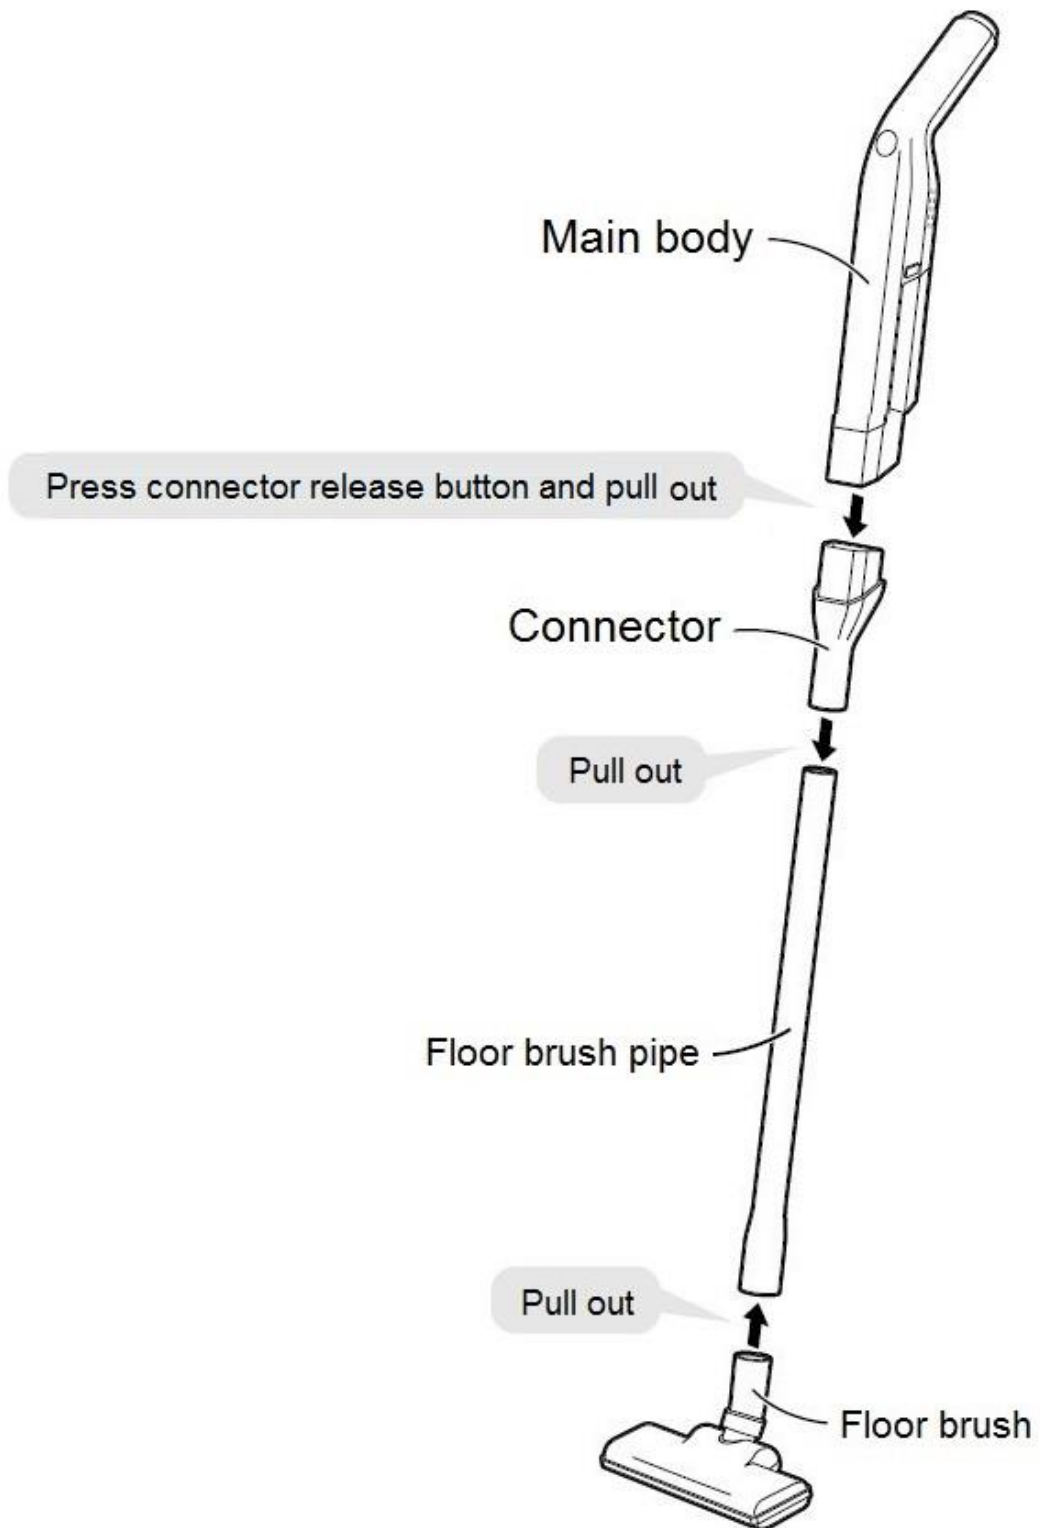

**ATTENTION!** User must press the connector release button to detach the connector from the main body.


## 6. Operation Instructions
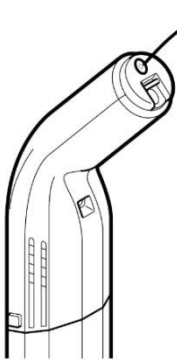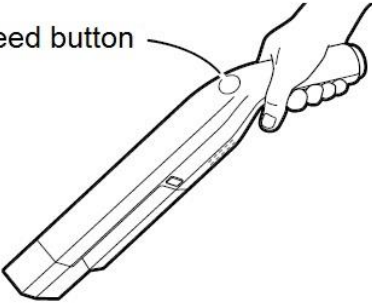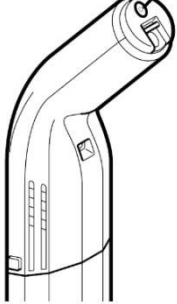
<p><b><u>Operation starts</u></b></p> <p>Press the &lt;power&gt; button, the power indicator lights up and the appliance starts to work as default “Normal” mode (low speed).</p>	 <p>Power button</p>
<p><b><u>Change mode</u></b></p> <p>Press the &lt;speed&gt; button every time to change from “Normal” mode (low speed) to “High” mode (high speed).</p> <p>Press the &lt;speed&gt; button repeatedly can change the mode alternately.</p>	 <p>Speed button</p>
<p><b><u>Operation complete</u></b></p> <p>Press the &lt;power&gt; button to switch off the appliance.</p>	 <p>Power button</p>

## Accessories Assembly and Usage (handheld)


### Detach the connector

- ① Lift the main body and press the connector release button.
- ② Detach the connector from the main body.

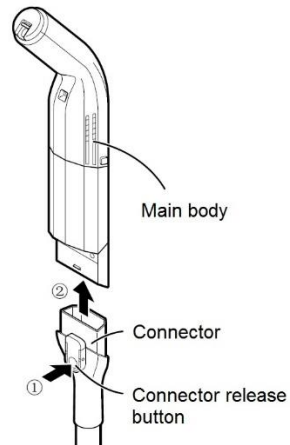


### Operation starts

Press the <power> button, the power indicator lights up and the appliance starts to work as default "Normal" mode.

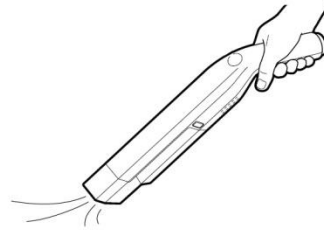


### Operation complete

Press the <power> button to switch off the appliance.

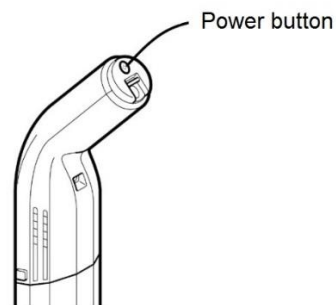


### Accessories install

To deal with different environments, user can assemble the accessory brushes according to the actual situation to achieve the ideal cleaning performance.

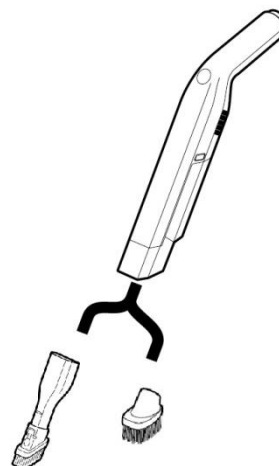


## Install the hang strap

1. Pass the tail of the hang strap through the shaft at the back of the handle.

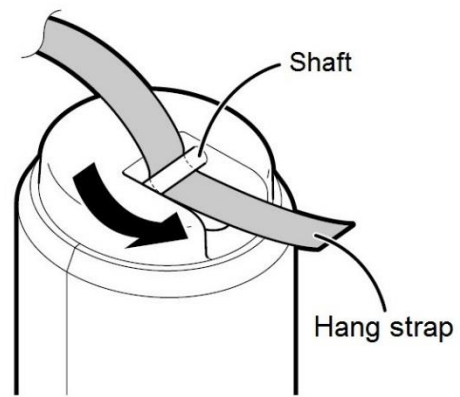


2. As illustrated at the right hand side, pass the tail of the hang strap through the bottom of the buckle, go around the shaft in the middle then pass through the buckle again. The assembling completed.

**(ATTENTION!** The hang strap must be fastened to the main body; otherwise, the appliance may accidently fall to the ground or malfunction)

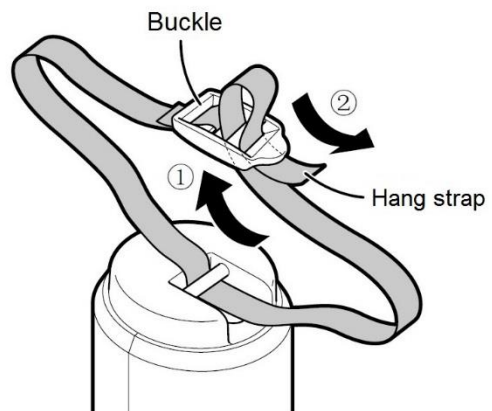

3. Make use of the hang strap to hang the appliance on the hook of the wall when the appliance is not in use.


**(ATTENTION!** The hook must be firmly tied to the wall. If the hook or the wall is loose, the appliance may fall over easily, which may cause the appliance and floor damage.

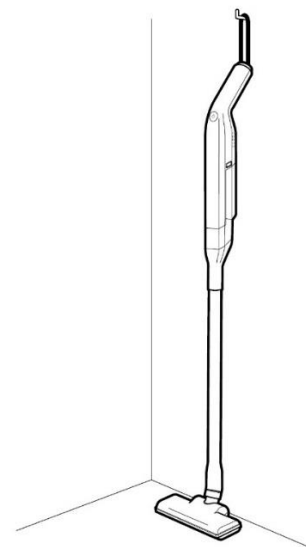


## Application of anti-slip cover

In addition to using a hang line to hang the appliance on the wall, in order to prevent the appliance from accidentally falling when leaning against the wall, user can make use of the anti-slip cover to properly install on the handle of the main body to avoid accidental falling of the product during placement.

1. Align the anti-slip cover with the handle, and then push it on the end of the handle until it is secure.

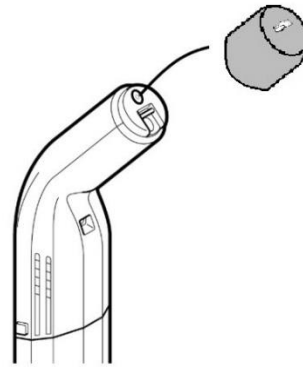

2. If the operation needs to be suspended during operation, user can make use of the anti-slip cover installed to lean the appliance against the wall.



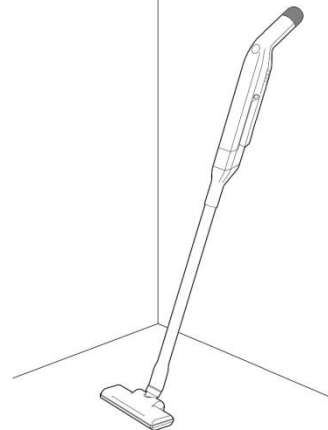




## 7. Charging

Be sure to fully charge the battery when used for the first time or when not used for a long time. (**DO NOT** press the <power> button or switch ON when charging)

**WARNING!** The electricity supply must be 220V AC, and the adapter supplied must be used. It may cause malfunctions and fire if improper adapter is used to charge the appliance.
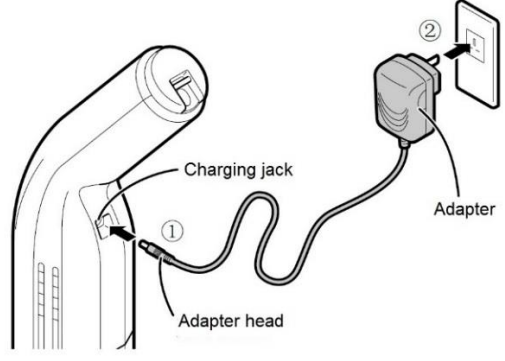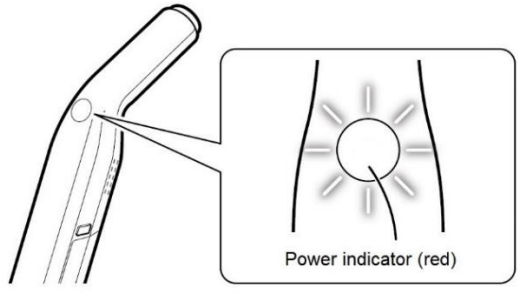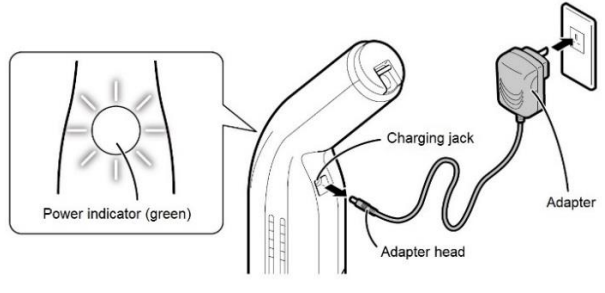
<p><b><u>Connect the adapter</u></b></p> <p>① Plug the adapter head into the charging jack at the back of the appliance.</p> <p>② Plug the power adapter into the power socket.</p>	 <p>The diagram illustrates the two-step process of connecting the adapter. Step 1 shows the 'Adapter head' being inserted into the 'Charging jack' on the back of the appliance. Step 2 shows the 'Adapter' being plugged into a standard power socket. Labels include 'Charging jack', 'Adapter head', and 'Adapter'.</p>
<p><b><u>Identify the power indicator</u></b></p> <p>The red light will switch on when charging starts. Normal charging time is about 4.5 hours.</p> <p>If the battery temperature is too high, the red light will flash. Make sure to recharge after the adapter is cooled down completely.</p>	 <p>The diagram shows a close-up of the power indicator light on the appliance. A callout box shows a glowing red light with the label 'Power indicator (red)'.</p>
<p><b><u>Charging complete</u></b></p> <p>When the power indicator turns to green, representing the charging is finish. User can unplug the adapter from the power socket, then unplug the adapter head.</p>	 <p>The diagram shows the appliance with the adapter connected. A callout box shows a glowing green light with the label 'Power indicator (green)'. Labels include 'Charging jack', 'Adapter head', and 'Adapter'.</p>

\* Remarks: The battery needs to be fully charged before first use.

\* Remarks: The adaptor and main body will become hot while charging, which is normal.

\* Remarks: If the appliance is not used for a long time, please charge it every 3 months. Prevent battery aging.

## 8. Troubleshooting

<u>Problem</u>	<u>Cause</u>	<u>Solution</u>
The appliance does not work.	The rechargeable battery power is not enough.	Use after fully charged the vacuum cleaner battery.
Power indicator flashes while the appliance cannot be charged.	Incorrect adapter is used.	Use the adapter supplied to charge the appliance.
	Protection has been activated.	Suspend the operation. Let the product to cool down for 30 minutes before using it.
The suction power becomes weak.	Dust cup is full.	Refer to <b>Chapter 2.1 Clean the dust cup and filter</b> to clean them.
	Too much dust accumulated on the filter.	
	The battery power is not enough.	Charge the appliance.
	Dust cup is not installed properly.	Refer to <b>Chapter 2.1 Clean the dust cup and filter</b> to install the dust cup.
	Foreign object blocked the floor brush.	Refer to <b>Chapter 2.3 Clean the floor brush</b> to remove the foreign object.
When operate, some dust escape from exhaust vent.	Dust cup or filter is not installed properly.	Refer to <b>Chapter 2.1 Clean the dust cup and filter</b> to install the dust cup and filter.
Noise.	Dust cup is full.	Refer to <b>Chapter 2.1 Clean the dust cup and filter</b> to clean them.
	Clogged by foreign object.	Remove the foreign object.
The appliance stops operating during use.	Protection has been activated.	Suspend the operation. Let the product to cool down for 30 minutes before using it.

If the above solutions cannot fix the problem, do not attempt to repair it by yourself. Please contact Shun Hing Electric Service Centre Ltd. for checking and repairing.

## **9. Special Avowal**

1. The content in the operation manual has been checked. Our company reserves the hermeneutic power to any printing errors or misunderstanding on the content.
2. If there are technical improvements on the appliance, the operation manual will be updated in new version without prior notice. The product appearance and specification are subject to the manufacturer information.
3. In case there is any inconsistency or conflict between the English versions and Chinese versions of the terms, the Chinese versions shall prevail.
4. The e-copy of user manual can be sent by email on requested. For enquiries, please call Shun Hing Electric Works & Engineering Co., Ltd. hotline at 2861 2767.

## **10. After Sales Service**

1. For any defect, in the judgement of technician from Shun Hing Electric Service Center Limited, caused under normal use, our company is responsible for repairing or replacing parts of the said electrical appliance free of charge within one year guarantee period commencing from the date of purchase. Any defect part which has been replaced shall become our property. Guarantee service does not cover the repair or replacement of consumable parts etc.
2. User must present the official invoice/redemption voucher and the product warranty card with the chop from sales point/ redemption center for maintenance. For enquiries, please call Shun Hing Electric Service Center Limited hotline at 2406 5666.

# 備忘錄

---

# 備忘錄

---

# 備忘錄

---



信興電工工程有限公司

**SHUN HING ELECTRIC WORKS AND ENGINEERING CO., LTD.**

辦公室：香港九龍尖沙咀東部麼地道67號半島中心9樓

電話：2861 2767

圖文傳真：2865 6706

網址：<http://www.rasonic.com>

電郵：[shew@shunhinggroup.com](mailto:shew@shunhinggroup.com)

Office: 9/F., Peninsula Centre, 67 Mody Road, Tsimshatsui East, Kowloon, H.K.

Tel: 2861 2767

Fax: 2865 6706

Website: <http://www.rasonic.com>

E-mail: [shew@shunhinggroup.com](mailto:shew@shunhinggroup.com)

保養及維修 Maintenance and Repair Service:

信興電器服務中心有限公司

**SHUN HING ELECTRIC SERVICE CENTRE LTD.**

香港新界葵涌勝耀街2號信興中心11樓

電話：2406 5666

圖文傳真：2408 0316

網址：<http://www.shesc.com/zh>

11/F, Shun Hing Centre, 2 Shing Yiu Street, Kwai Chung, N.T., H.K.

Tel: 2406 5666

Fax: 2408 0316

Website: <http://www.shesc.com/en>

客戶服務中心

香港新界葵涌勝耀街2號信興中心1樓

九龍尖沙咀東部麼地道67號半島中心B座9樓

香港天后琉璃街7號柏景中心22樓

澳門慕拉士大馬路193-199號南嶺工業大廈5樓I座

Customer Service Centre

1/F, Shun Hing Centre, 2 Shing Yiu Street, Kwai Chung, N.T.

9/F., Block B, Peninsula Centre, 67 Mody Road, Tsim Sha Tsui, Kowloon

22/F, Parkview Centre, 7 Lau Li Street, Tin Hau, Hong Kong

Avenida de Venceslau de Morais, No. 193-199,5 andar - I, Edf. Industrial Nam Leng, Macau

有關最新之香港及澳門客戶服務中心資料，請參閱信興服務中心網址：<http://www.shesc.com/zh>

For the latest information of Hong Kong and Macau service center, please visit

<http://www.shesc.com/en>

RVC-A0622