


Operating Instruction Manual

Rasonic
Built-in Hob Cooker

MODEL NUMBER	3 Burners
	RG-323AGB RG-323AGW

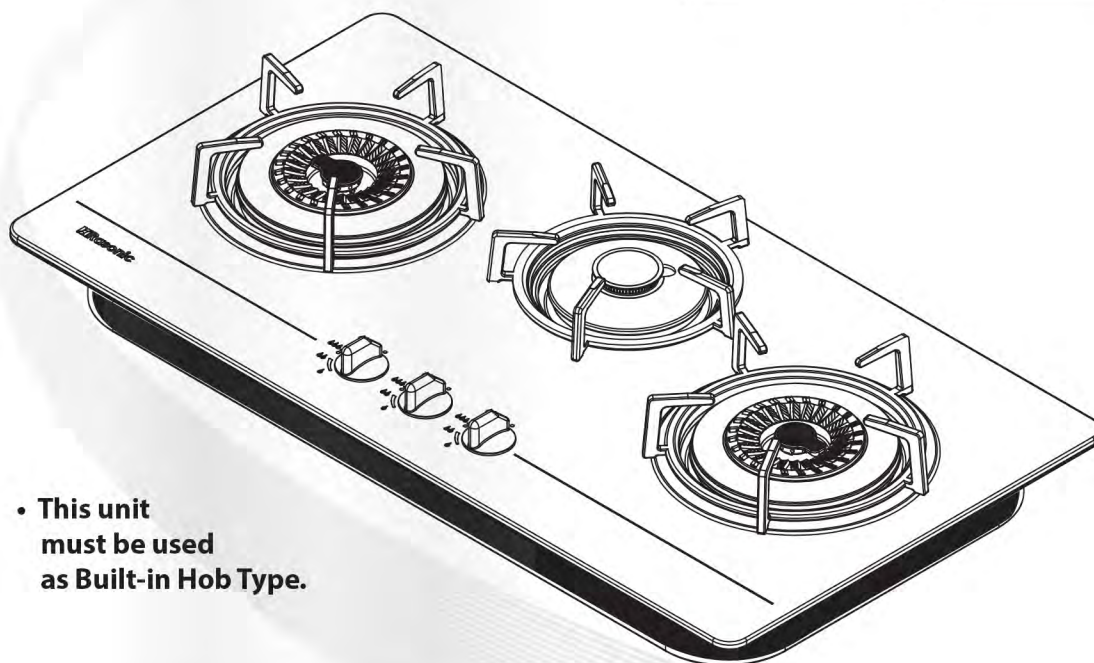

- This unit must be used as Built-in Hob Type.

ATTENTION TO ALL USERS

- Thank you for buying Rasonic product.
- Read this instruction manual and warranty card carefully before installing and operating the hob cooker. Please keep this copy for future reference.
- To ensure the correct and safe use of this appliance, please read the instructions carefully and follow the instruction guide. Installation must comply with local laws and guidelines. (e.g. Hong Kong : Gas Safety Ordinance)
- The user will be held responsible for any damages and faults due to incorrect installation or misuse of the appliance during the warranty period.
- According to the Gas Safety Ordinance of Hong Kong, any gas installation works including the installation of appliances and connection tubing, must be undertaken by registered gas installers who are registered for that appropriate classes and be employed by registered gas contractors.

CONTENTS

	Pages
1. Safety Instruction <ul style="list-style-type: none"> - Symbol Meaning - Danger - Warning - Caution - Parts Identification - Accessories 	2 3 3~5 6~7 8 8
2. Correct Operation Method <ul style="list-style-type: none"> - Turn On • Turn Off Flame Adjustment Method - Flame Cut Off Due to Wind or Overflow 	9 10
3. Maintenance & Cleaning	11
4. Troubleshooting	12
5. Preparation For Installation <ul style="list-style-type: none"> - Kitchen Countertop Cut-out Requirement a. New Installation of RG-233 Hob On New Kitchen Countertop 	13 14
6. Installing The Cooker <ul style="list-style-type: none"> - Special Note (Ventilation of Cabinet) - Use of Accessories - Installing the Cooker - Installing Dry Battery - Gas Connection to the Appliance - Gas Connection Joint Installation Guide For Gas Type - Before Using The Cooker - Burner Cap Placement 	14 14 14 14 15 16 17 17
7. Memo & Inspection After Complete Installation Work	18
8. Product Specification	19




• Safety Instruction

Symbol Meaning




MUST STRICTLY COMPLY

To avoid danger to user and damage to property, installer and user must follow the following safety instruction.

■ Damage caused by incorrect installation or usage due to neglecting the content instruction manual will be shown using the different symbol.

	DANGER	Explanation in this column means [will cause fatal or serious injury]
	WARNING	Explanation in this column means [will possibly cause fatal or serious injury]
	CAUTION	Explanation in this column means [possible of causing fatal or serious injury]

■ Items to look into are classified and explained using the following symbol.

	This symbol means to concentrate on the [caution] content.
	This symbol cannot proceed with the [prohibited] content.
	This symbol means must do the [compulsory] content.

• **Safety Instruction**

⚠ DANGER

Must Strictly Follow

■ **In case of gas leak, follow the steps below:**

1. When there is a gas leakage, turn the knob to 'OFF' position.

2. Close and disconnect the regulator from the gas tank.

3. Open windows and door to ventilate the cooking area.

4. Contact and report the leakage to your gas supplier.

■ **DO NOT** ignite or switch on/off any electrical products if gas leakage is detected.

• **Safety Instruction**

⚠ WARNING


Must Strictly Follow

■ **Correct type of gas**


- Use only the type of gas specified on the **Model No. Mark** sticker.
- ! If the type of gas used is incorrect, this will lead to abnormal combustion, carbon monoxide poisoning, burn, fire etc.
- If the gas stated is incorrect, please contact our dealer.

(Model Number Mark sticker is stuck on the hob cooker)
For Example,

Rasonic	RG-323AGB(LPG)
Model No.:	HK LPG
Type of Gas	RG-323AGB (LPG)
Sales Code	2.90kPa
Gas Pressure	L 5.3kW, R 5.3kW
Rated Heat Input:	C 1.7kW, T 12.3kW
	JIA
Type approved by	
Type Approval Certificate No.	12.08.00001
Serial No.	
SHUN HING ELECTRIC WORKS & ENGINEERING CO. LTD	
KHI	Made in Malaysia

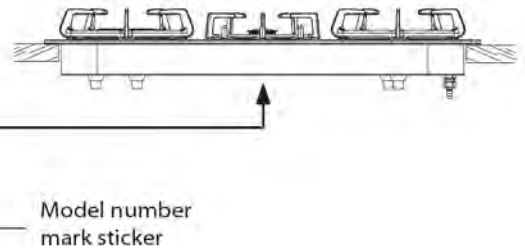

■ **Minimum distance from the walls & ceiling**

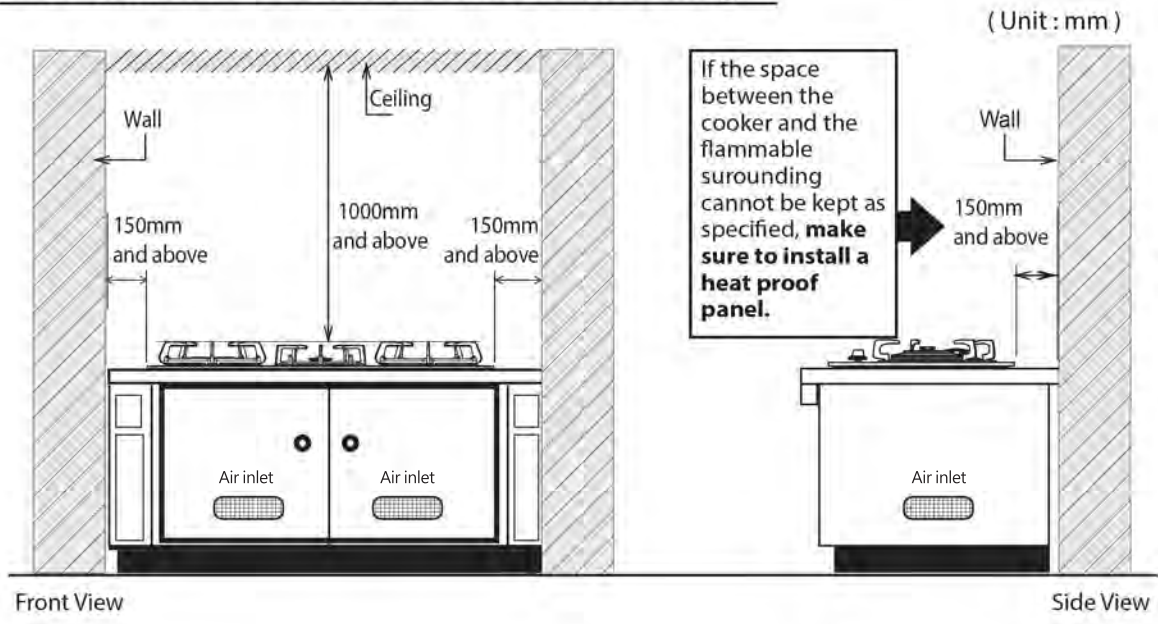

If the space between the cooker and the flammable surrounding cannot be kept as specified, **make sure to install a heat proof panel.**

When installing the cooker, maintain the minimum distance from walls and ceiling. Otherwise, **the walls may be overheated and can cause fire.**

Same distance must also be kept for wooden wall covered with metal plate.




⚠ WARNING

Must Strictly Follow


• Safety Instruction

■ Minimum distance from the walls & ceiling (...continued)

• In case of insufficient space on the left, right and back side

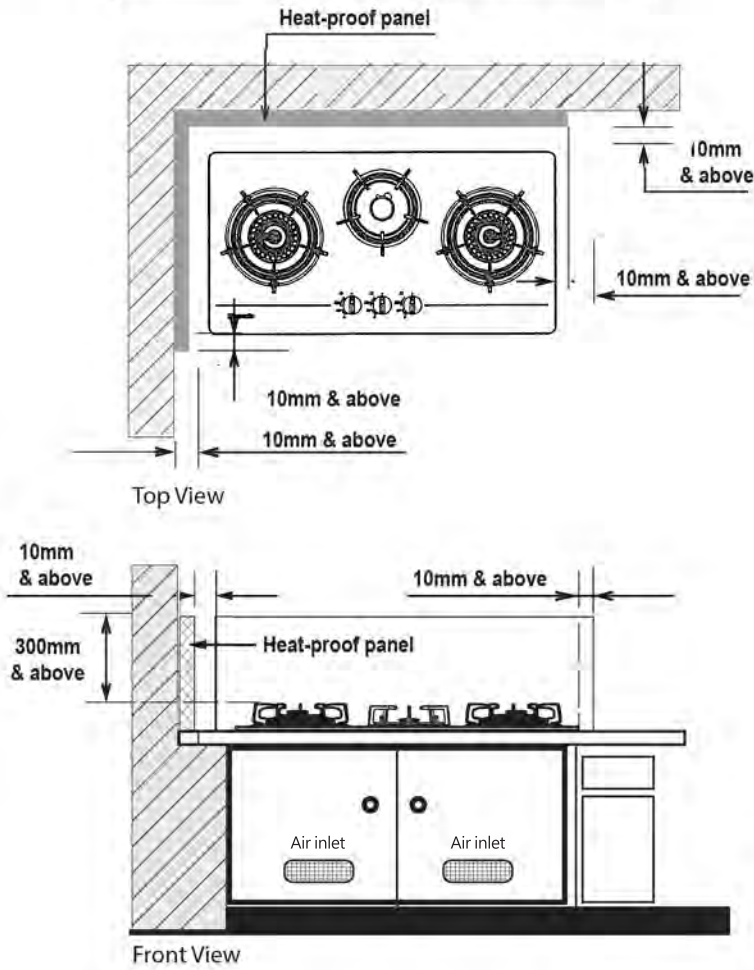

• In case of insufficient space above the cooker.

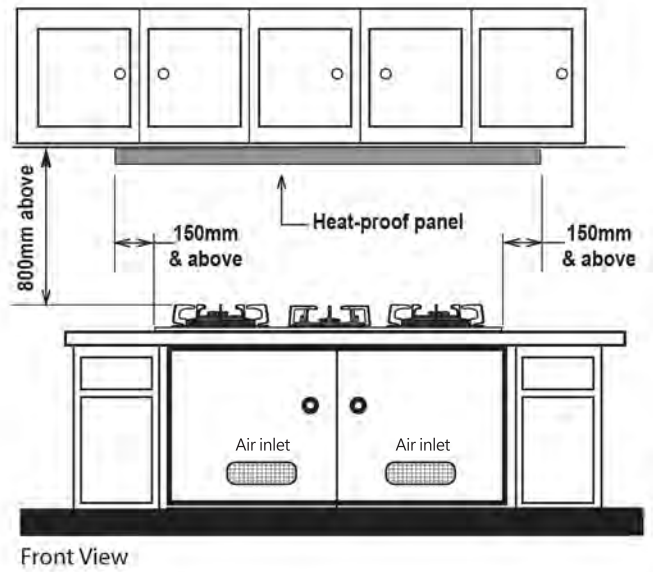

■ Flammable items


Do not place any flammable items on top or next to the cooker.



⊘ It may cause high temperature, fire and carbon monoxide poisoning.

■ Abnormal conditions

In the event of abnormal conditions (abnormal combustions, smell, sound, earthquake, fire etc.), **immediately stop using the hob and turn off the regulator.**

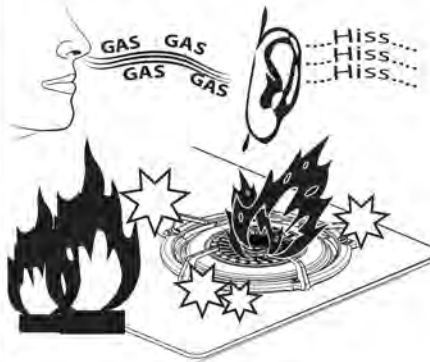

! If the cooker is used in any abnormal situations, it may cause fire etc.

QUICKLY & INSTANTLY

Turn the knob to OFF position.

Unplug!


CLOSE the main valve!



WARNING

• Safety Instruction

■ Self repair

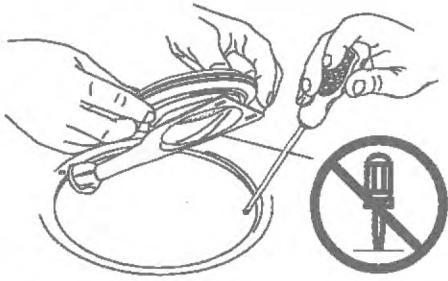


DO NOT dismantle, repair or modify the cooker.

Unauthorised dismantling, repair or modification of the cooker may cause abnormal combustion and even fire.

Please contact your dealer in case of any abnormality.

Any unauthorised repair or dismantling this product will instantly void the warranty of this unit.

■ Flammable items

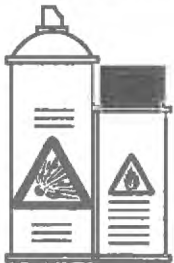

DO NOT spray when the cooker is in use.

It may cause fire or explosion.

■ Exhaust hole

DO NOT block exhaust hole at cooking area.

It may cause high temperature, fire and carbon monoxide poisoning.

■ Aerosol spray



DO NOT place the aerosol can near the unit.

It may cause fire or explosion.

■ Handling of unit by children

DO NOT allow children to operate the cooker alone.

This may cause accidents such as burns, fire and explosion.




Accidents **MAY** happen!

Must Strictly Follow

■ Do not leave while the cooker is on.

DO NOT go to bed or outside while the hob cooker is still on.

It may cause carbon monoxide poisoning due to lack of air or fire due to over heating.

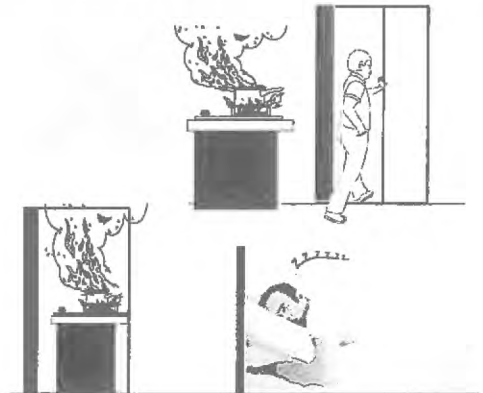


■ Air ventilation

Ensure proper ventilation during operation.

! Poor ventilation will cause carbon monoxide poisoning due to incomplete burning.



■ Installation of the unit

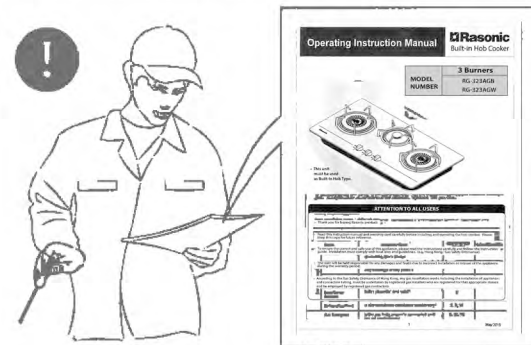

Installation **must** strictly follow operational instruction manual.

It may cause fire or the cooker may break down if installed by unqualified contractor.

■ Movement of cooker

DO NOT move the cooker while in use.

It may cause burn or fire.





CAUTION


Must Strictly Follow

• Safety Instruction

■ Use of gas hose & clip

Use gas hose specified for gas cooker only.


Use of regular hose will cause gas leakage, gas poisoning and explosion. (PVC hose cannot be used due to its low heat resistance).

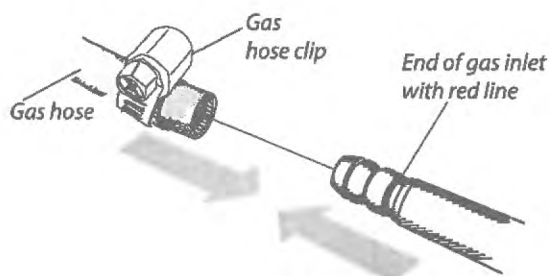

Insert the gas hose to the gas inlet until the red line and tighten it with a hose clip.



If the connection is loose, it may cause gas poisoning or explosion.

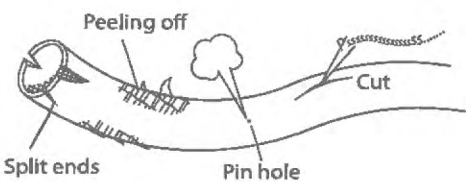

■ Common defects on gas hose.

Change the gas hose every **3 years** or before it deteriorates.


If the gas hose is deteriorated, it may cause gas leak due to cracks at the connection end. The connection will become loose. Change the gas hose periodically.

■ Glass top panel

DO NOT place any objects on the glass top panel.



It may cause cracks or scratches to the glass top panel.

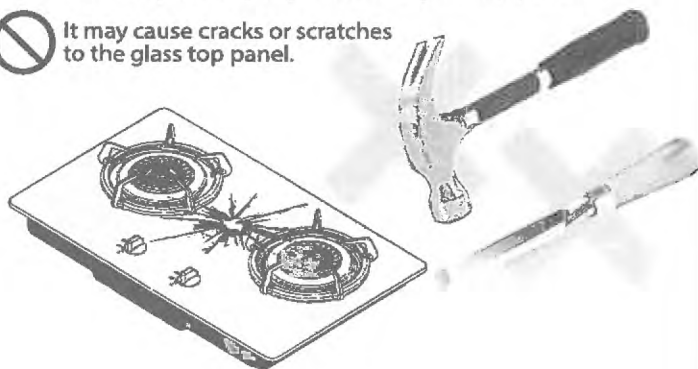


■ Overflow

Avoid overflow during cooking.



Overflow may cause internal components to corrode.

■ Connection method

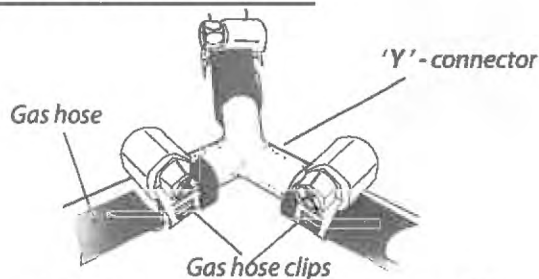

Minimise hose joining and **DO NOT** use "Y" connector.




It may cause leakage, gas poisoning, explosion etc.

■ Gas hose position

Gas hose cannot be placed on top of cooker or be pressed by other objects.




Bent or damaged hose will cause gas leakage, explosion, fire etc.

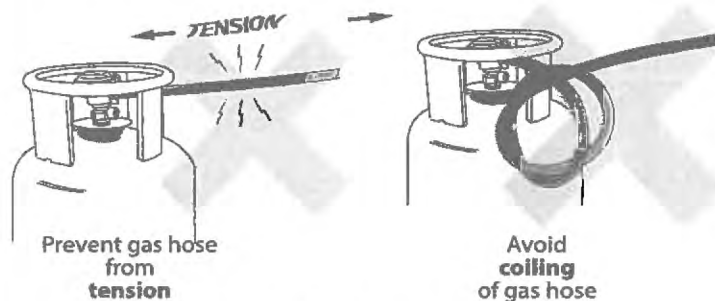

Prevent gas hose from tension

Avoid coiling of gas hose

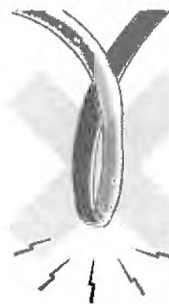

Avoid folding on gas hose

■ Fire condition

Always check flame condition during operation.



If continue using the cooker with abnormal sound or unstable flame, carbon monoxide poisoning will happen.

■ Ensure that fire is extinguished

Make sure to turn off the cooker after every usage. Turn off the gas valve before leaving or going to sleep.



If it is not turned off, gas leak or fire may happen.

■ Air supply hole for cabinet

The cabinet on which the cooker is installed **MUST** have air ventilation cut-out.



The size of the air vent is 10cm² for each 1.0kW of heat released. This cooker must have an air ventilation size of 110cm². Insufficient air supply will cause incomplete burning and carbon monoxide poisoning.



CAUTION

Must Strictly Follow

• Safety Instruction

■ Caution when igniting




DO NOT put your face near to the burner when igniting the cooker.



It may cause burn due to the flame or the flame's heat.


■ Main function of cooker

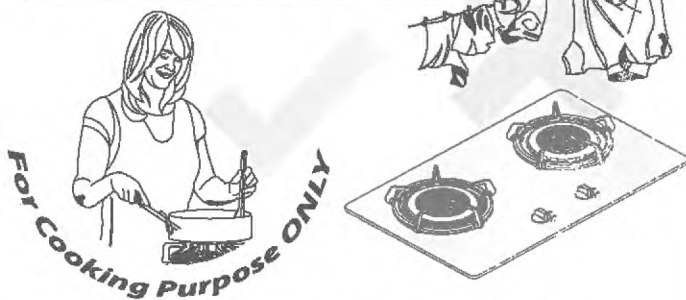

DO NOT use the cooker other than for cooking.

Using the cooker for drying clothes, toasting biscuits etc. will cause abnormal operation (over heating, fire, burn, gas leakage etc.)

■ Hot areas of cookers

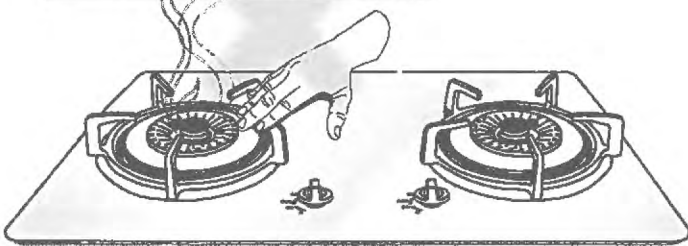


During and after using the hob cooker, do not touch the cooker other than the operating knob.

High heat from the top panel, trivets and its surrounding may cause burn.



Knob may be heated after cooking for long hours. In that case, please do not touch the knobs with bare hands. Please use heat protective apparels such as cooking gloves.

■ Control flame size

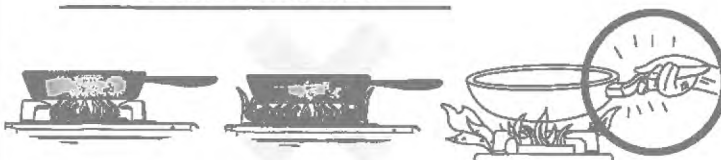

Control the flame so that it does not exceed the pan size.

Flame exceeding the pan size may cause high heat at handle and this will cause burn, fire etc.

■ Location of installation

DO NOT install the cooker underneath the cabinet, where items may fall onto the cooker.




Falling item may cause fire and PVC light installed at the cabinet may deform due to the heat from the cooker.

■ Installation of cooker in vehicle / on boat

DO NOT install cooker inside a vehicle or on a boat.



Heavy vibrations will cause fire and damage to the cooker.

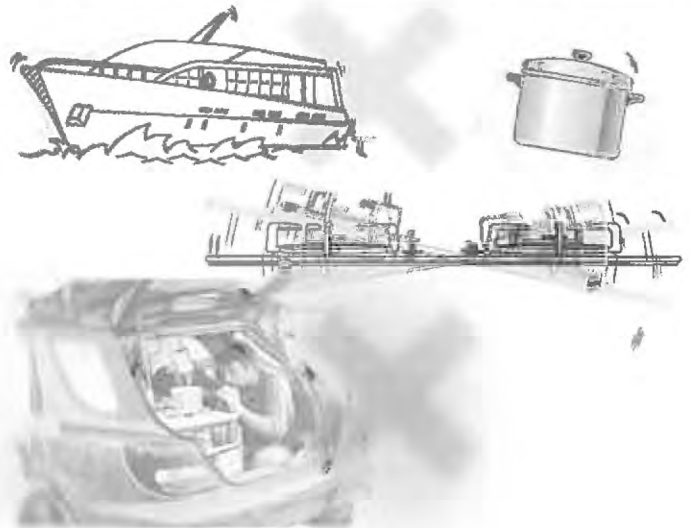

■ Gas connection by qualified technician

Gas connection **MUST** be done by qualified technician.



Installation by unqualified technician may cause gas leakage.

■ Use original parts & accessories

DO NOT use over 36cm diameter utensils or accessories of other brands other than those specified.



If the burner is covered with sheet metal, burning net, aluminium plate etc, it will cause abnormal burning and thus causes carbon monoxide poisoning.

■ Cabinet surface

The cabinet's surface on which the cooker is installed must be of heat resistant material.



Using non-heat resistant material will cause fire etc.

DO NOT apply lacquer paint at the top surface where the cooker is installed.




The heat from the cooker may cause discolouration.

ATTENTION !

According to the Gas Safety Ordinance of Hong Kong, any gas installation works including the installation of appliances and connection tubing, must be undertaken by registered gas installers who are registered for that appropriate classes and be employed by registered gas contractors.

PARTS IDENTIFICATION

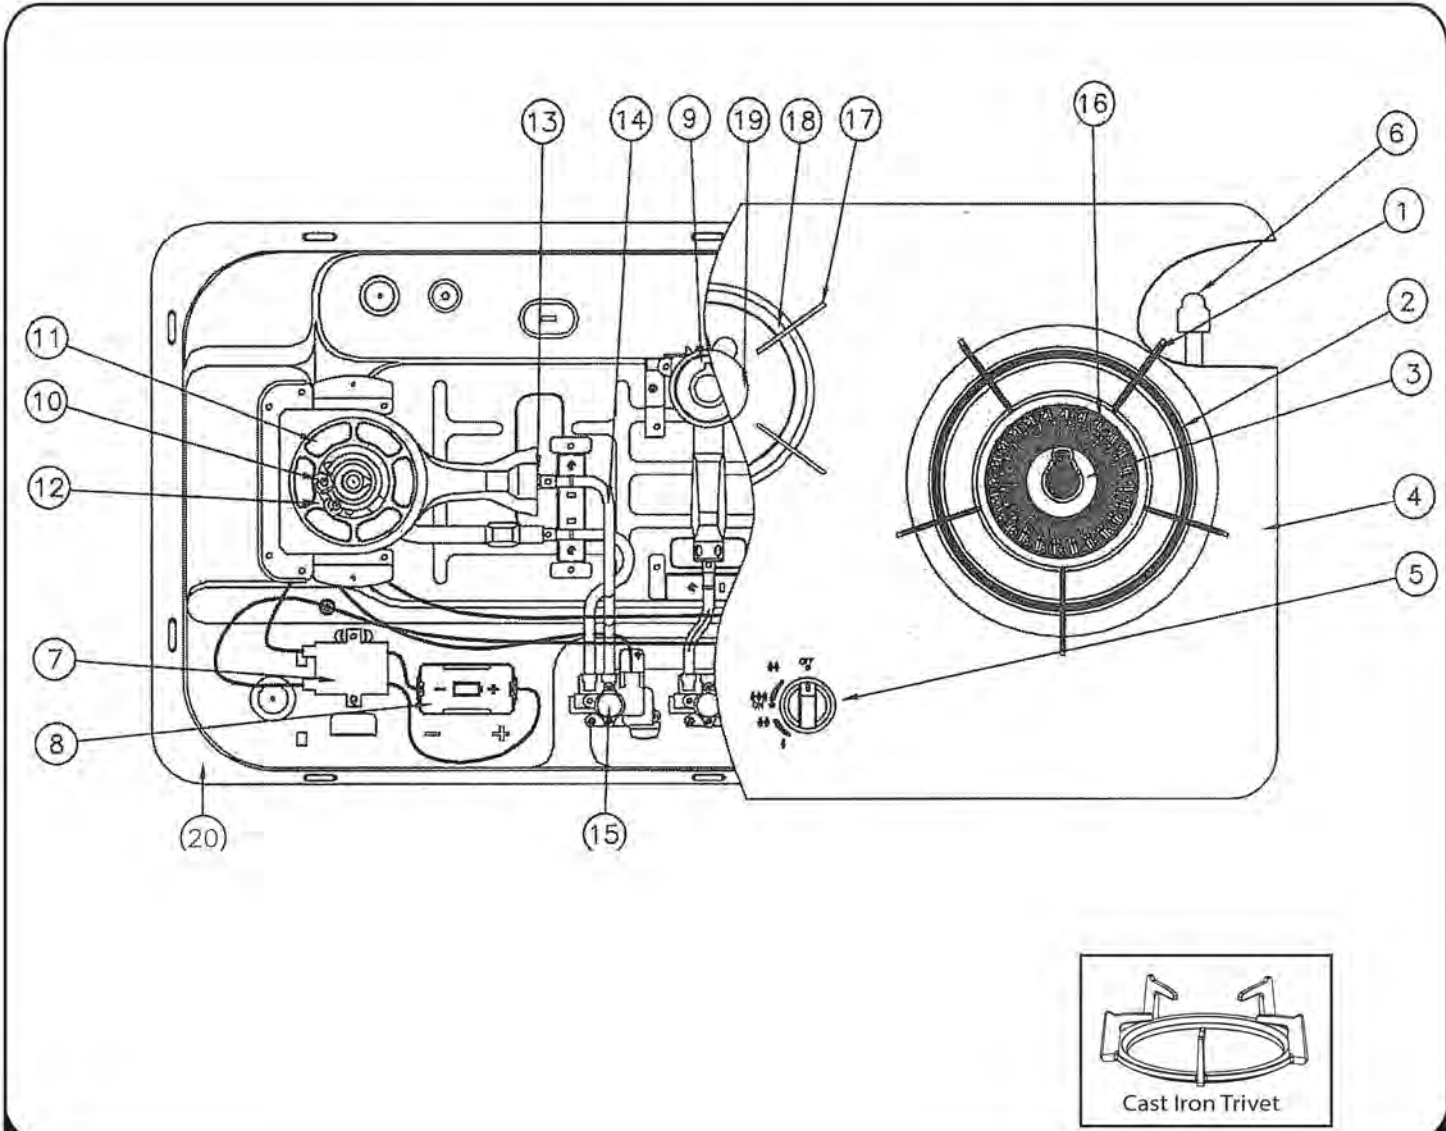

- | | | | | |
|-----------------|------------------------|--------------------------|-----------------------|------------------------|
| 1. Trivet | 6. Gas inlet | 10. Plug U | 14. Gas pipe | 18. Tray hob enamel CB |
| 2. Tray 120 | 7. Igniter | 11. Burner body | 15. Gas control valve | 19. Burner cap |
| 3. Burner cap E | 8. Battery compartment | 12. Flame failure device | 16. Burner cap | 20. Body |
| 4. Glass top | 9. Center burner body | 13. Damper | 17. Iron trivet | |



ACCESSORIES

Instruction manual	Warranty card	Countertop cut-out template	Dry battery (D Size)	Gas inlet + Packing (LP Gas only)	Auxiliary trivet
1 unit	1 unit	1 unit	1 unit	1 set	1 unit

TURN ON • TURN OFF FLAME ADJUSTMENT METHOD


1. TURNING ON THE HOB COOKER

- i. **PUSH the knob DOWN FULLY & TURN ANTI-CLOCKWISE towards the [ON] position (hold it down for 5-8 seconds)**

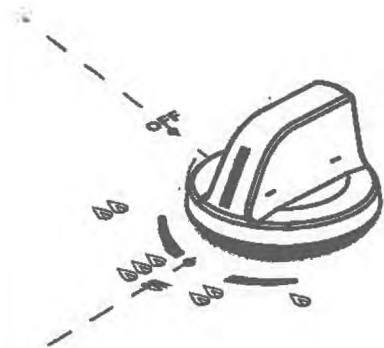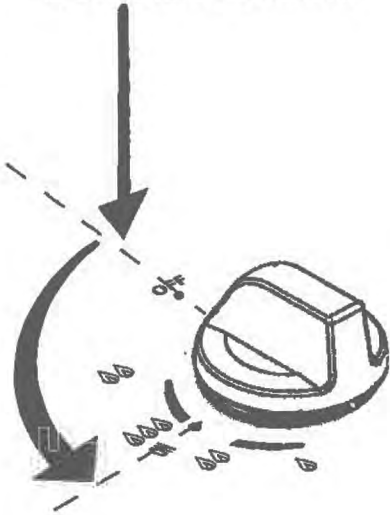

- ii. Release the knob and check if the flame is ignited. If the flame cannot be ignited, turn the knob to [OFF] position and repeat the above steps.
- iii. When burner is ignited, turn the knob to the desired flame size.

CAUTION :

 If after 15 seconds the flame does not ignite, switch off the burner and open a nearby window or door. Wait at least one minute before trying to switch the burner back on.


NOTE :

It would take longer time for ignition if the gas cooker has not been used after a long time.


2. ADJUSTING THE FLAME




• Burner cap & Burner cap E : **MEDIUM TO HIGH FLAME**

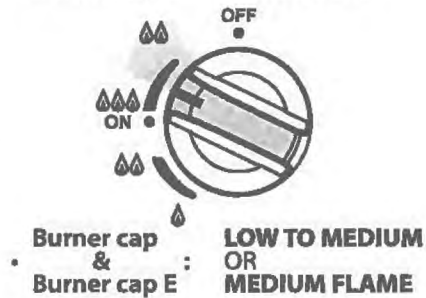

• Burner cap & Burner cap E : **LOW TO MEDIUM OR MEDIUM FLAME**

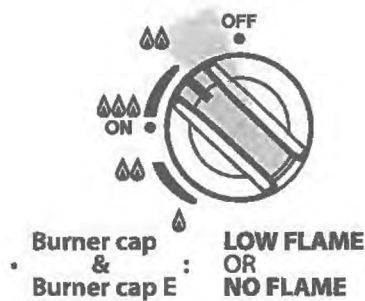

• Burner cap & Burner cap E : **LOW FLAME OR NO FLAME**

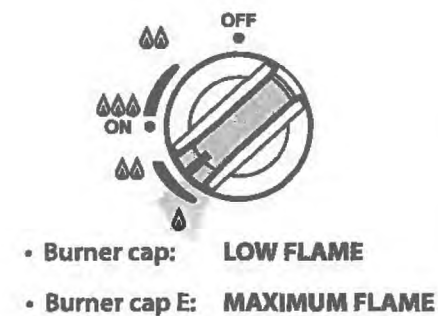

• Burner cap: **LOW FLAME**
• Burner cap E: **MAXIMUM FLAME**



• Burner cap: **NO FLAME (lowest level of flame power to keep function going)**
• Burner cap E: **LOW FLAME**

CAUTION :

 Flame size does not exactly follow the flame indicator.

3. TURNING OFF THE HOB COOKER



- Turn the ignition knob clockwise towards the [OFF] position.

Make sure that you hear a 'CLICK' sound.

This indicates that the gas cooker is completely turned off.


NOTE :

Sometimes, a "POP" sound may be heard when the burner is turned off. This is normal.

• **Correct Operation Method**

FLAME CUT OFF DUE TO WIND OR OVERFLOW

■ **Flame failure device**

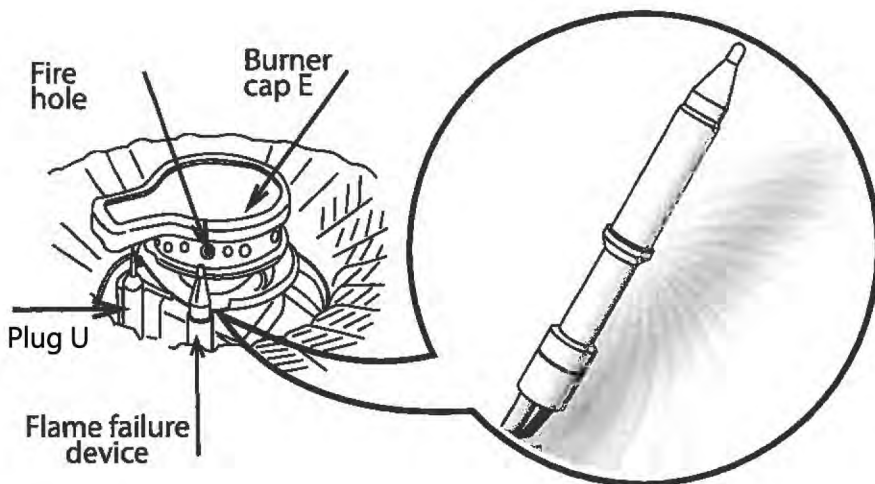

This flame failure device reacts to the temperature of the flame, as it detects the heat from the flames produced.

When the flames are extinguished, the sensor picks up the change in temperature and the flame failure device starts to function. It cuts off the gas supply automatically within a minute.

Remember to turn the knob back to "OFF" position.

If you wish to continue using the hob, please make sure that the slits of the burner cap is not blocked by any spillage. Then, reignite the hob.

REMEMBER !



CAUTION :


If after 15 seconds the flame does not ignite, switch off the burner and open a nearby window or door. Wait at least one minute before trying to switch the burner back on.

WARNING:

Although the gas hob is well equipped with flame failure device, it is highly recommended that the user should not leave the unit unattended when in use.

REQUEST:

Clean the flame failure device and burner cap if they get wet due to overflow.
(Otherwise, it may cause ignition failure.)

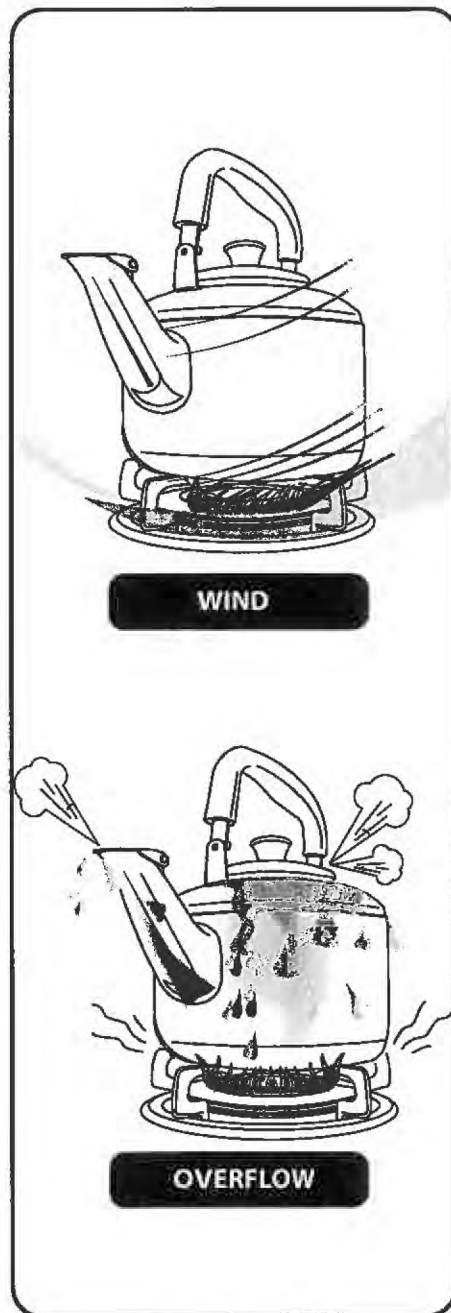

• **Cleaning And Maintenance**

CLEANING & MAINTENANCE

USE	Cleaning solution	Cleaning equipment
	- Mild detergent	- Soft cloth
	- Dish washing detergent	- Soft sponge
DO NOT USE		- Soft brush
	- Alkaline / Strong acid	- Sheet metal
	- Bleach	- Metal brush
	- Corrosive	- Wire gauze
	- Petroleum	- Hard sponge



NOTE:
Wear safety gloves when cleaning and carrying out maintenance to avoid injury.

■ **Glass Top**


When cleaning tempered glass top, wipe it with a soft, damp cloth and mild detergent.

DO NOT use metallic sponge, sharp chisel or scraper to clean the glass surface when removing sticky food residue. This may create scratch marks.



■ **Trivet**


Wipe and clean the trivet regularly to prevent it from rust and corrosion.

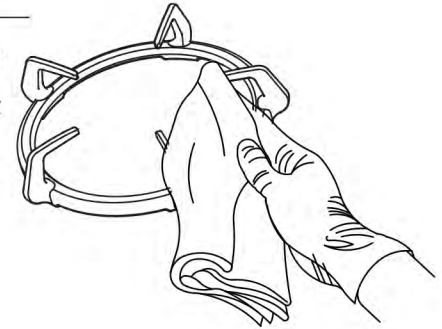

■ **Flame Failure Device**

If the tip of the sensor is covered up with food residue caused by burnt overflow, porridge and so on, please **DO NOT** use rough metal scour or scraper to clean it as this may dent and spoil the sensitivity of the sensor's tip. Use only soft brush, sponge with warm water and dishwashing detergent.




Wipe off the dirt or food residue covering the tip of the sensor.

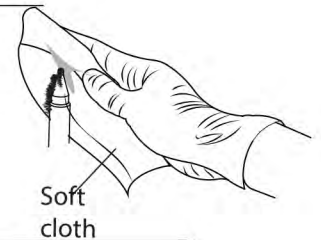


■ **Burner Body, Burner Cap & Burner Ring**

Wipe clean the steps of the burner body where the burner cap seats. If the dirt or oxidised material is hard to be removed, try using a soft brush.

Always keep the burner and its surroundings clean to prevent ignition problems.

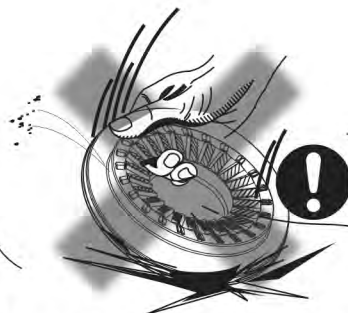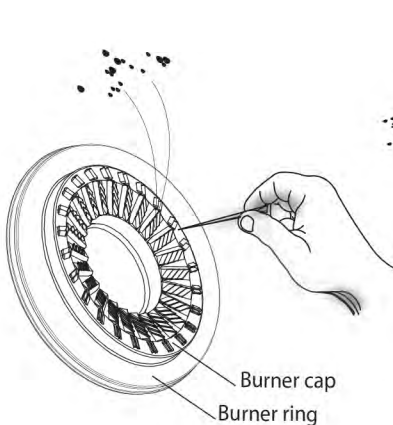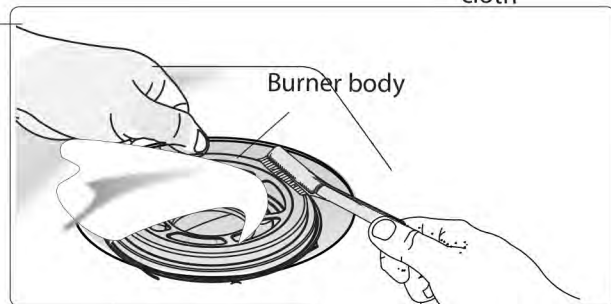

DO NOT knock or bump the burner cap against any hard surface in attempt to clean it. This can dent or damage the burner cap and burner ring.

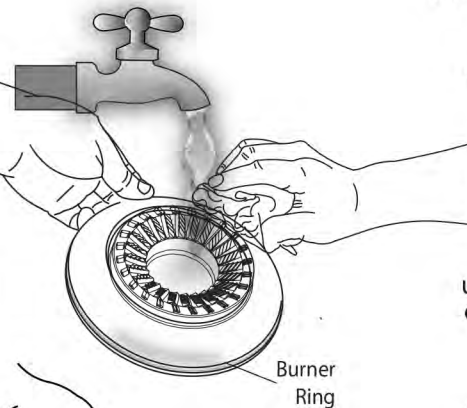


Clean the burner ring with normal dishwashing detergent and a soft sponge. Ensure that both the inner and outer steps where the parts contact each other are free from dirt and any unwanted food residue that can affect their placements.

If the flame becomes uneven, clean the slits of the burner, which may be clogged with dirt, by using a needle.

DO NOT attempt to widen the slits of the burner cap.

It can cause irregular combustion and explosion.

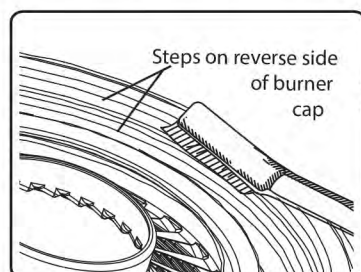

Rinse them thoroughly under running water. Put them under a sunny area to dry or wipe them with soft cloth. When they are dry, cap them back onto the burner body. Ensure that the burner can be rotated to ensure proper contact and placement. *(Please refer to Placement of Burner Cap on Page 13)*

TROUBLESHOOTING


PROBLEMS & OBSERVATIONS	POSSIBLE CAUSES	SOLUTIONS
1. No ignition	<ul style="list-style-type: none"> i. Gas cylinder is empty (no gas). ii. Main gas valve / regulator is not turned on. iii. Air is trapped in the gas hose. iv. Electronic ignition is wet or dirty. v. The safety valve is not opened. vi. Cable is bitten by rats. vii. Wrong gas is used. viii. Battery is incorrectly installed. ix. The installed battery is weak. 	<ul style="list-style-type: none"> i. Replace the gas cylinder. ii. Turn off the main gas valve/regulator once and then turn it on to full. iii. Repeat the ignition process until all the trapped air in the hose is purged completely. iv. Clean and wipe the electrode with a dry cloth. v. Push in the ignition knob and turn it anti-clockwise until a click sound is heard. Ensure that the burner has been lit. Press the ignition knob for 3-4 seconds and release the knob. vi. Contact our dealer to replace the cables and install wire net. (See Page 3) vii. Use only the type of gas specified on the Model No. Mark sticker. viii. Re-install the battery. ix. Replace the weak battery.
2. Difficult to sustain the flame or flame easily cut off	<ul style="list-style-type: none"> i. Ignition knob is not properly pressed down. ii. The flame failure device, plug U or burner cap is dirty. iii. Air is trapped in the gas hose. iv. Gas cylinder is almost empty. v. Something heavy is placed on top of the gas hose and it is pressing down on the gas pipe, constricting the gas flow, or the gas hose is bent. 	<ul style="list-style-type: none"> i. Return the knob to OFF position. Press the knob down fully and turn it anti-clockwise slowly. ii. Clean the dirt. Hold it for a few seconds after the flame is ignited. iii. Repeat the ignition process for a few times until all the air in the hose is purged completely. iv. Replace the gas cylinder. v. Place the gas hose back properly.
3. Unstable flame, flame cut off during operation or produce abnormal sound	<ul style="list-style-type: none"> i. Gas cylinder is almost empty. ii. Safety sensor or the plug U or the burner cap is dirty. iii. Burner body and burner cap hole are blocked. iv. Nozzle is clogged. 	<ul style="list-style-type: none"> i. Replace the gas cylinder. ii. Clean the part. iii. Clean the part. iv. Contact our dealer for service or repair. DO NOT ATTEMPT TO REPAIR IT BY YOURSELF.
4. Smell of gas or gas leakage happening	<ul style="list-style-type: none"> i. Crack lines or pin holes at the gas tubing. ii. Gas hose not properly connected. iii. Failure of the gas hob unit. iv. Connection between the regulator and gas cylinder. 	<ul style="list-style-type: none"> i. Turn the knob and regulator to OFF position and replace the leaking gas tubing. Do not replace it by yourself. ii. Connect it properly. Do not reconnect it by yourself. iii. Contact our dealer for service or repair. DO NOT ATTEMPT TO REPAIR IT BY YOURSELF. iv. Contact your gas cylinder supplier. <small>If gas leakage is detected, please see Page 2 and follow the safety instruction.</small>
5. Incomplete Combustion (Yellow flame)	<ul style="list-style-type: none"> i. Burner cap is not properly assembled. ii. Burner cap hole is clogged. iii. Nozzle is clogged. iv. Gas cylinder is almost empty. 	<ul style="list-style-type: none"> i. Position the burner cap properly. ii. Clean the burner cap. iii. Contact our dealer for service or repair. DO NOT ATTEMPT TO REPAIR IT BY YOURSELF. iv. Replace the gas cylinder.

• **Preparation For Installation**





DRAWING DIMENSION

NEW INSTALLATION
OF RG-323A HOB ON NEW KITCHEN COUNTERTOP

• **Cut-out Template**

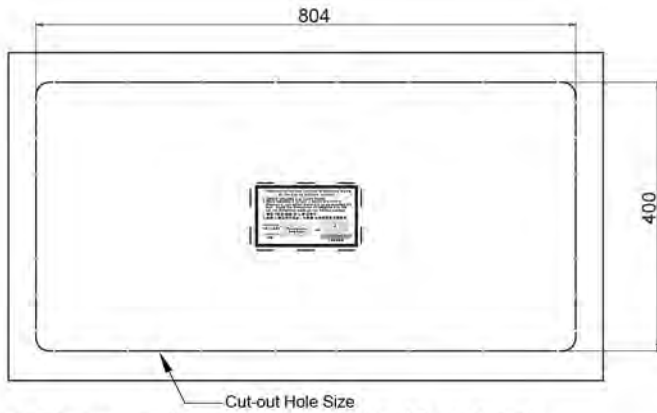

1. Please use the template provided for this hob.
2. It is **important** that the cut-out is set at the distance of **64mm** from the countertop's front. This is to provide ample cooking space when wok is used.

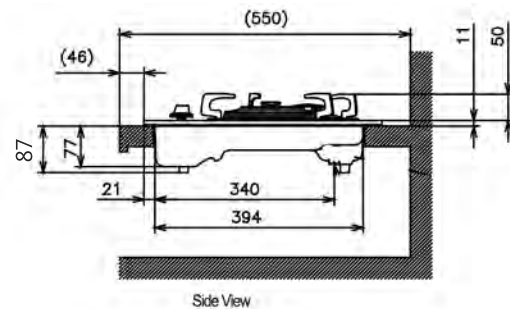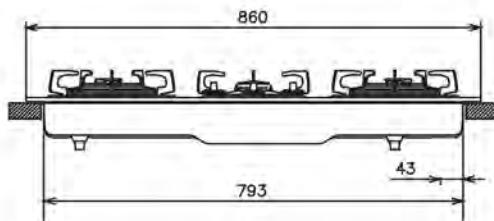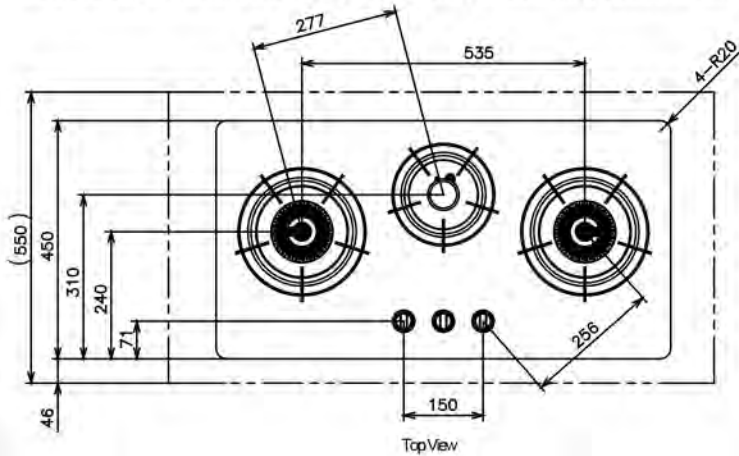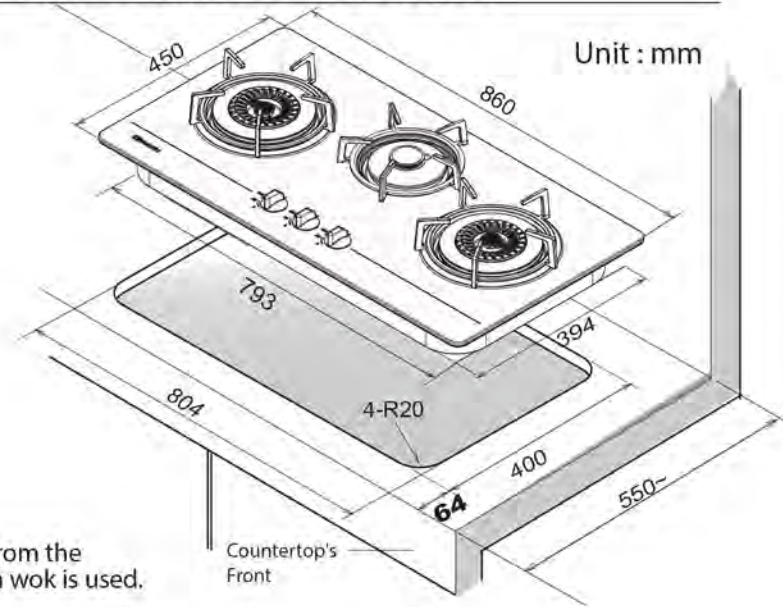

• **Installing The Cooker**

CAUTION

■ Install the gas cooker on a **solid and level surface**.

■ Install the hob cooker in a **dry area**.

! Unbalanced level will cause abnormal burning, carbon monoxide poisoning or fire.


! Humidity may cause damages to the hob cooker and shorten its product life.



Surface is level



Surface is **NOT** level

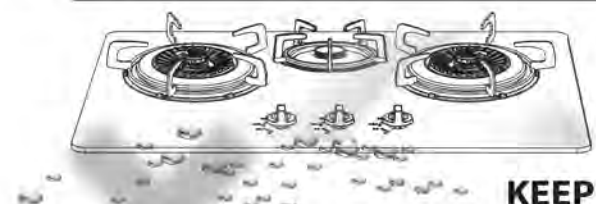

KEEP DRY!


• Installing The Cooker

1. SPECIAL NOTE

- Kitchen cabinet must have ventilation.

An air vent with the size of around 5.5cm X 20cm must be provided at the bottom of the cabinet, or with equally sized area using louvre. Please install wire netting in order to prevent rats and other insects from entering into the air inlet.

! If the size of the air vent to the appliance is insufficient, it would cause incomplete combustion and excessive release of carbon monoxide (CO) gas.

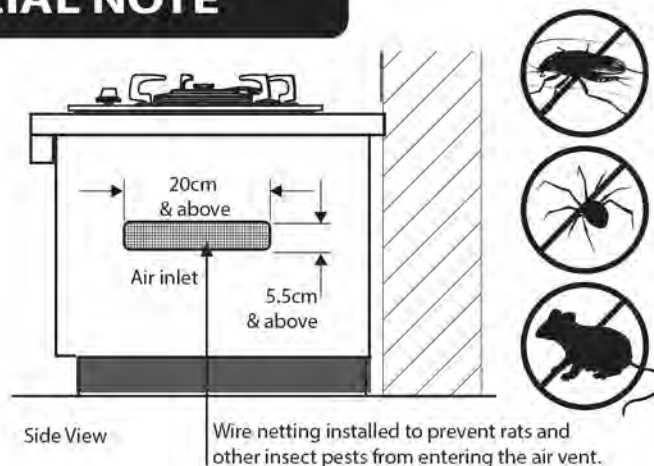


2. USE OF ACCESSORIES

- Check for any parts shortage based on the accessories lists as stated in the "Accessories" section on page 8.
- Contact our dealer in case of any parts shortage or damaged. Proceed with installation work after all parts are confirmed.


3. INSTALLING THE COOKER

- Space underneath the cooker and distance between the cooker and range hood as shown below:

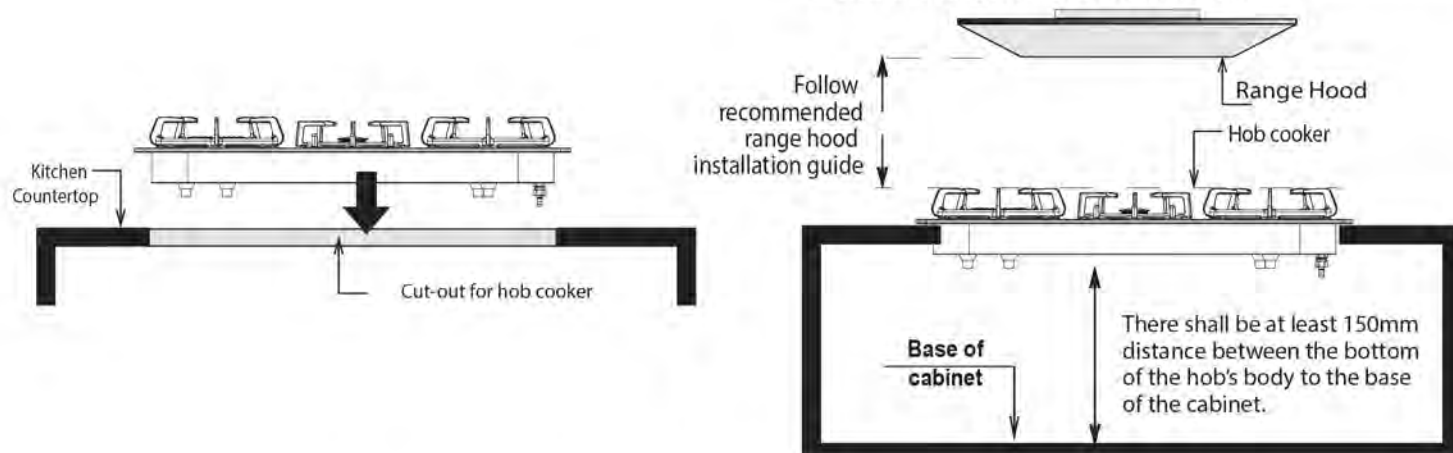

4. INSTALLING DRY BATTERY

- Install the dry battery into the battery compartment underneath the cooker as shown.

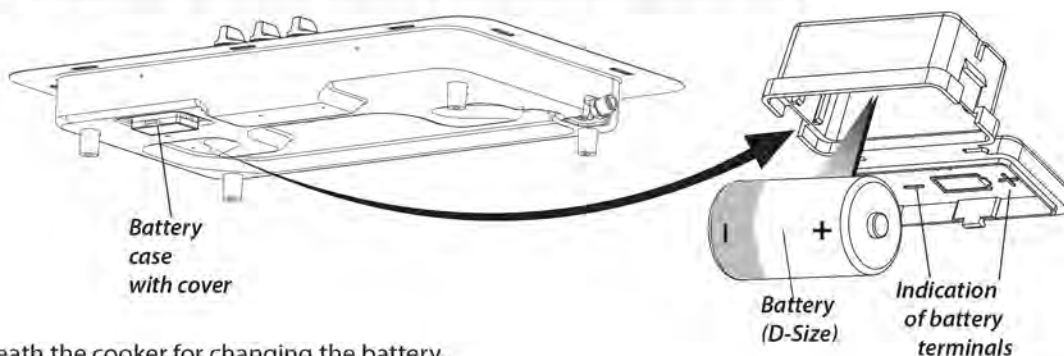

CAUTION

- Always reserve space underneath the cooker for changing the battery.

Change of dry battery

- When the sound of ignition spark becomes weak or the flames are easily put off during ignition stage, replace the old with new battery.
- Recommended to use "PANASONIC battery".

• Installing The Cooker

5. Gas Connection to the Appliance


Appliance installation work must be carried out by professional contractor accepted by local government, e.g. Hong Kong : Registered Gas Contractor (RGC), and approved piping and accessories must be used.

L.P. Gas Connection :

Use appropriate piping and accessories for connection. In Hong Kong, the following connection method shall be used.

a. **Stainless steel braided flexible tubing connection:**

Use approved gas tubing bearing EMSD approval marking (such as : 機電工程署批准 EMSD APPROVAL GTXXXX) for connection to appliances, or other appropriate methods accepted by EMSD.

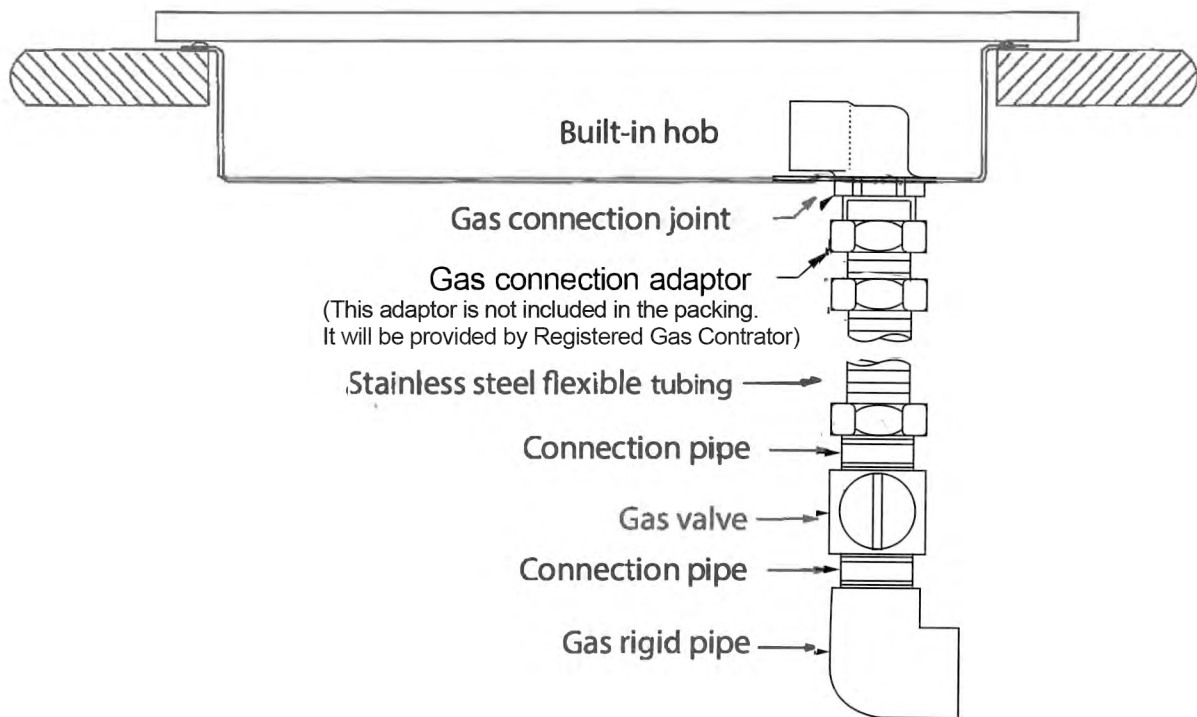

ATTENTION !

According to the Gas Safety Ordinance of Hong Kong, any gas installation works including the installation of appliances and connection tubing, must be undertaken by registered gas installers who are registered for that appropriate classes and be employed by registered gas contractors

• Installing The Cooker

5. Gas Connection to the Appliance


Town Gas Connection :

Use appropriate piping and accessories for connection. In Hong Kong, the following connection method shall be used.

a. Stainless steel braided flexible tubing connection:

Use approved gas tubing bearing EMSD approval marking (such as : 機電工程署批准EMSDAPPROVAL GTXXXX) for connection to appliances, or other appropriate methods accepted by EMSD.

■ GAS CONNECTION JOINT INSTALLATION GUIDE FOR STAINLESS STEEL FLEXIBLE TUBING 不銹鋼軟管接頭的安裝指南

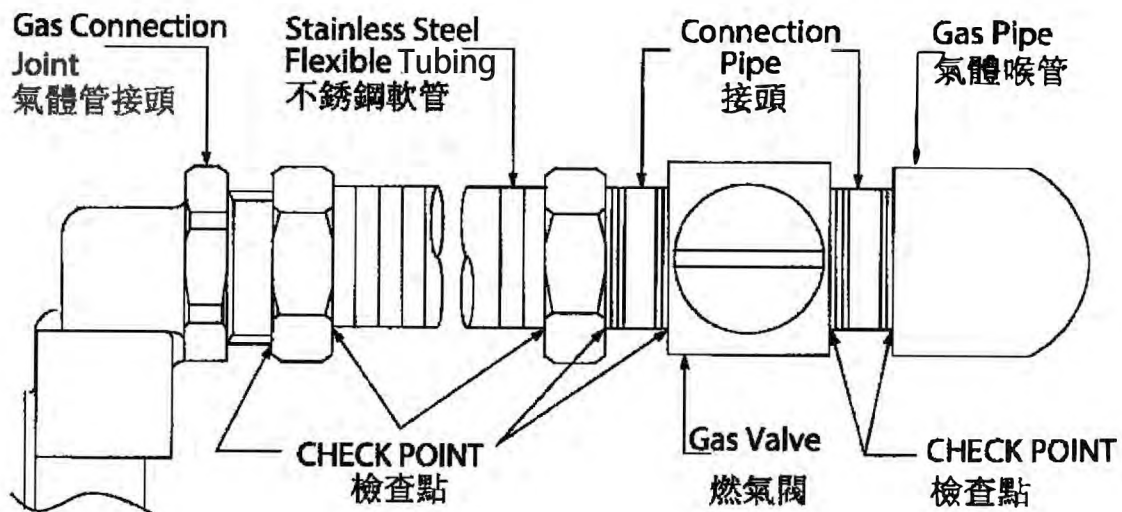

After installation, turn on the gas supply valve and use liquid soap (**NEVER** use torch or lighter) to check gas leakage. Examine all the **Check Points** as stated.

當安裝完畢後， 打開供氣閥並使用肥皂水（**絕不能**使用火焰或點煙器）來檢查是否有洩漏。請依上圖所示細查所有檢查點。

ATTENTION !

According to the Gas Safety Ordinance of Hong Kong, any gas installation works including the installation of appliances and connection tubing, must be undertaken by registered gas installers who are registered for that appropriate classes and be employed by registered gas contractors


• **Installing The Cooker**

6. BEFORE USING THE COOKER



- Carry out the inspection of the cooker by referring to the "Inspection After Complete Installation Work" section on Page 18

7. BURNER CAP PLACEMENT

■ **BURNER CAP** (For left and right burner)

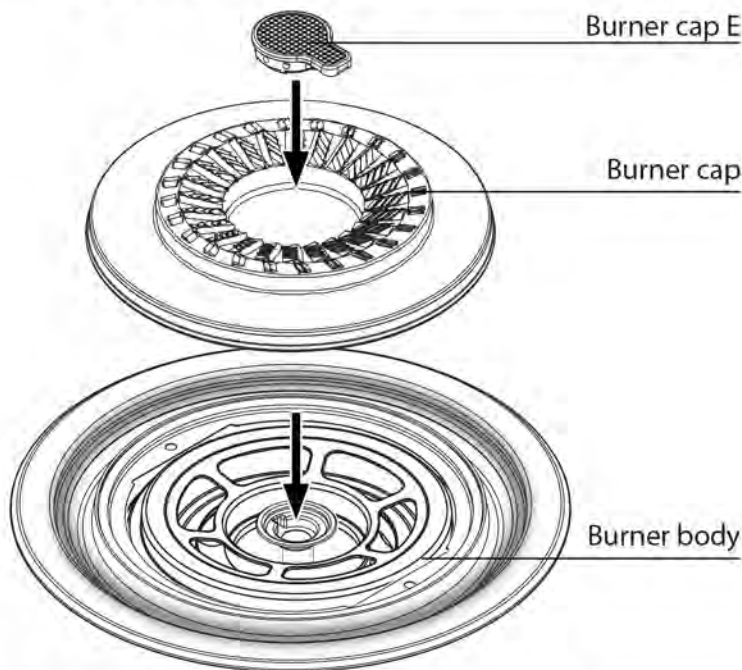


(For center burner)

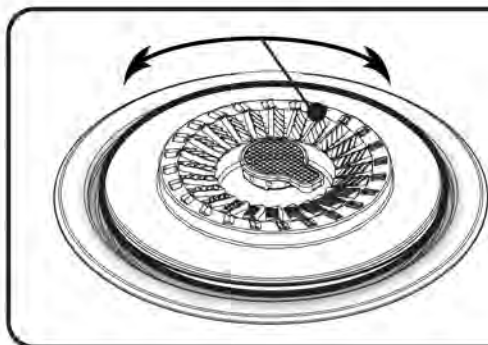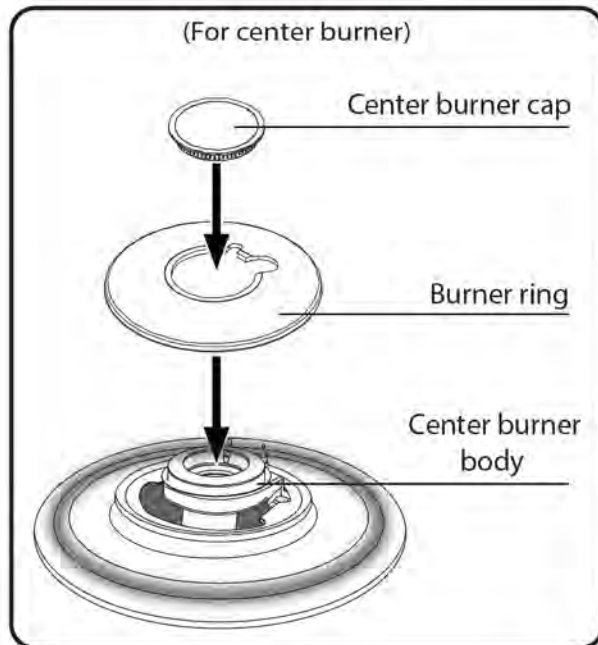

REMINDER

Remember to try rotating the burner cap when it is placed back onto the burner body. This is to ensure that the burner cap is sitting properly on the burner body. This also ensures that the gas does not leak out from under the cap.

■ **BURNER CAP E**

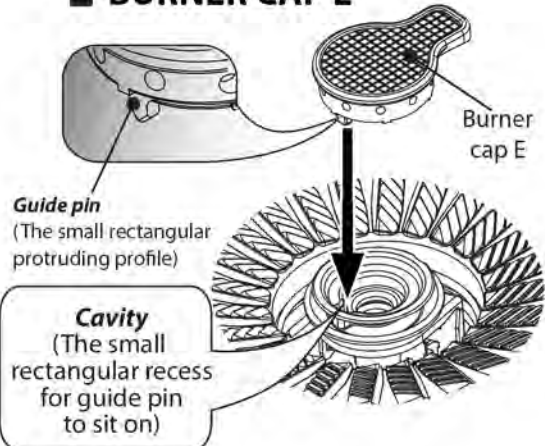

Gap created due to tilting of cap.

CORRECT

 TILTED

 DISENGAGED

- In case the burner cap and burner cap E are not correctly installed, the ignition will fail.
- If using the appliance where burner cap and burner cap E are tilted or disengaged, it would cause the below circumstances:-
 - The unstable flame and backfire will cause incomplete combustion, carbon monoxide poisoning or deformation of burner cap.
 - Flame retracting into burner will cause damage to the appliance.

INSPECTION AFTER COMPLETE INSTALLATION WORK (confirmed by registered gas installers)

ITEM		DESCRIPTION	REFERENCE PAGES	CONFIRMATION
APPLIANCES & SURROUNDING	Gas type	Type of gas used as specified on Model No. Mark sticker	3	
	Accessories	Are they correctly installed? Are there any shortage of any parts ?	8	
	Distance to flammable item	Is the distance of the hob's flame to flammable items sufficient?	4	
	Installation location	Is the place flat and solid?	9	
	Exhaust facilities	Is the ventilation condition satisfactory?	5, 6, 11	
Gas hose joint		Is the gas hose properly connected and has no gas leakage?	6, 12, 13	

MEMO

PRODUCT SPECIFICATION

ITEM	3-Burner Hob Cooker	
	RG-323AGB / GW	
Gas Type	HKLPG	HKTG
Gas Pressure (kPa)	2.9	1.5
Rated Heat Input (kW)	Left	5.3
	Center	1.7
	Right	5.3
	Total	12.3
Weight (kg)	15.7	
Power source	Dry battery (D size - 1 piece)	
Ignition method	Continuous spark ignition	
Safety sensor	Flame failure device	
Product size (mm)	860(W) x 450(D) x 148(H)	
Cut-out size (mm) Width (W) x Depth (D)	804 x 400	

“Town Gas model appliances do not need to be installed with an external gas governor”